 



TO REMOVE POWER TERMINAL COVERS INSERT SCREWDRIVER HERE AND TWIST OR PULL AWAY FROM TERMINAL HOUSING

TO ASSEMBLE POWER TERMINAL COVERS HOOK COVER LUGS BETWEEN GROMMET AND TERMINAL HOUSING PUSHING DOWN IN DIRECTION OF ARROW "A" ROTATE AND SNAP COVER HOME IN DIRECTION OF ARROW "B"





586 TERMINAL COVER

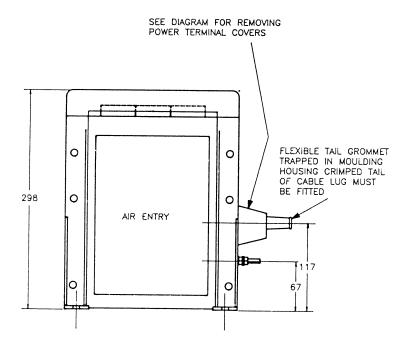

- NOTE 1 CONNECTIONS TO CONTROLS TERMINALS 1 TO 27
 ARE PLUG IN STYLE TERMINALS CAPABLE OF ACCEPTING
 1.5mm (16 AWG) CABLE INTO CLAMP STYLE LOOPS.
 2 EARTH CONNECTIONS ARE M6 ALL OTHER
 CONNECTIONS ARE M8. ALL NECESSARY FIXINGS FOR
 ELECTRICAL CONNECTIONS ARE SUPPLIED. MECHANICAL
 FIXINGS ARE NOT SUPPLIED.
 3 AT LEAST 100mm CLEARANCE ABOVE AND BELOW
 CONTROLLER MUST BE PROVIDED FOR COOLING AIR
 4 TERIMINAL COVER CAN BE REMOVED BY RELEASING
 RETAINING SCREWS TO GIVE ACCESS TO CONTROL
 TERMINALS

 - **TERMINALS**