


3-1 Installing the Converter

Chapter 3 INSTALLING THE CONVERTER

IMPORTANT: Read Chapter 12: "Certification for the Converter" before installing this unit.

Mechanical Installation

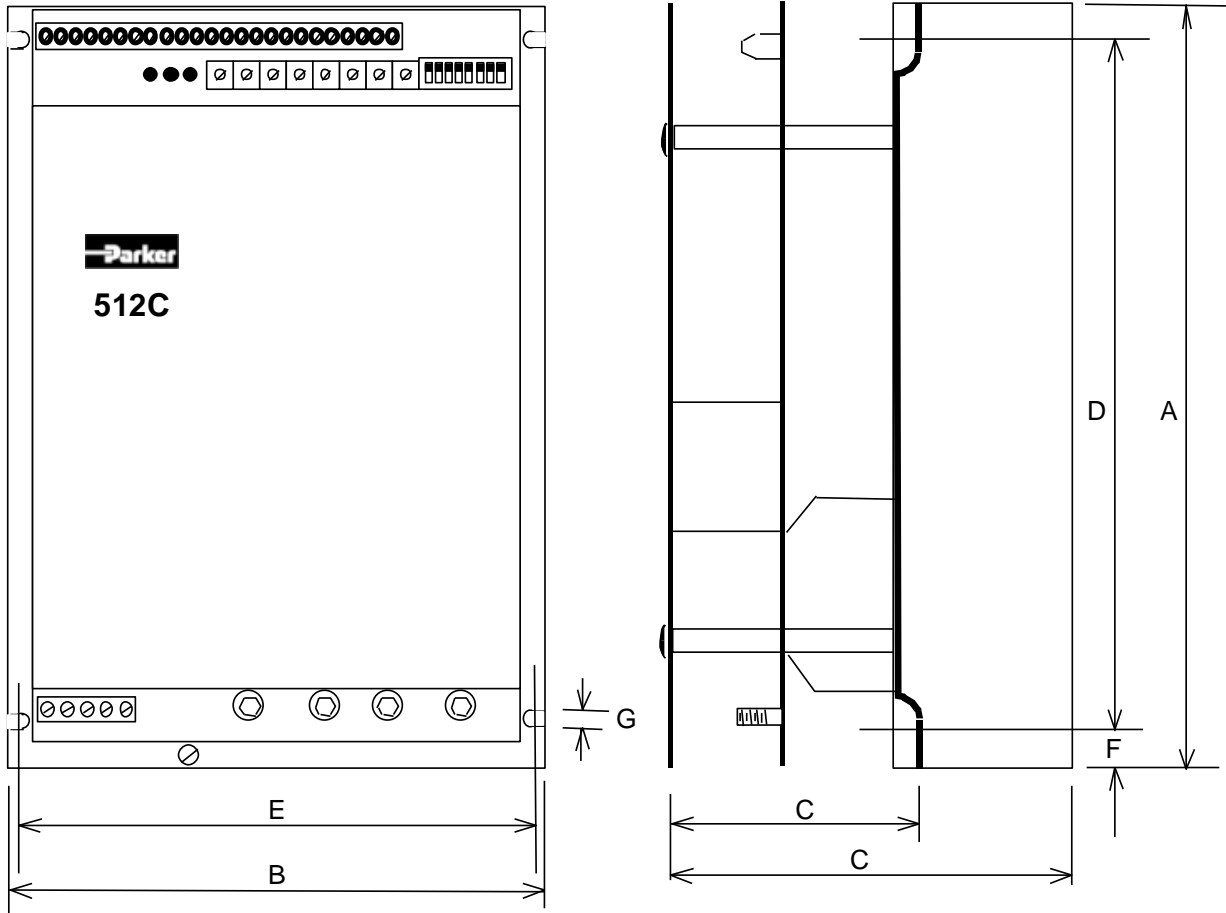

| PRODUCT | OVERALL DIMENSIONS | | | FIXING CENTRES | | SIZE | SLOT DETAIL | |
|---------|--------------------|-------|-------|----------------|-------|------|-------------|-----|
| | A | B | C | D | E | | F | G |
| 512C-04 | 240mm | 160mm | 90mm | 210mm | 148mm | M6 | 15mm | 7mm |
| 512C-08 | 240mm | 160mm | 90mm | 210mm | 148mm | M6 | 15mm | 7mm |
| 512C-16 | 240mm | 160mm | 90mm | 210mm | 148mm | M6 | 15mm | 7mm |
| 512C-32 | 240mm | 160mm | 130mm | 210mm | 148mm | M6 | 15mm | 7mm |

Table 3.1 Product Dimensions