

SSD Parvex SAS

8, avenue du Lac - B.P. 249
F-21007 Dijon Cedex
www.SSDdrives.com






DIGIVEX Power Motion

Digital servoamplifier

User and commissioning manual

PVD 3522 GB – 04/2004

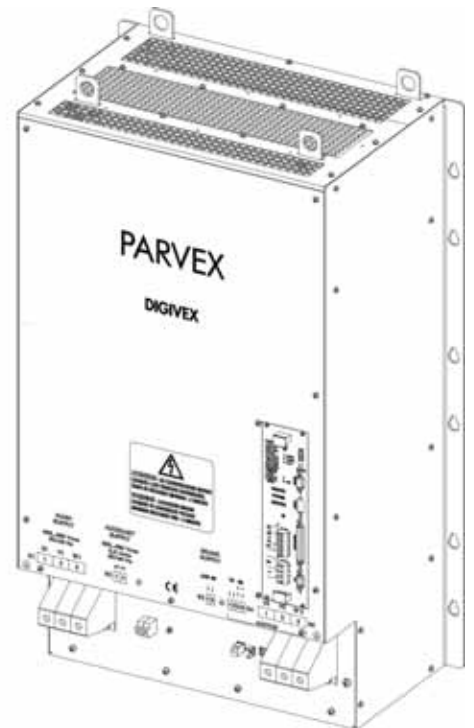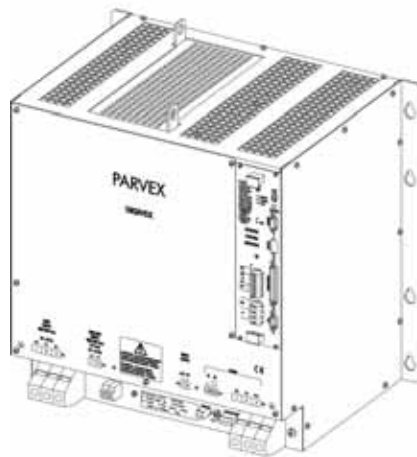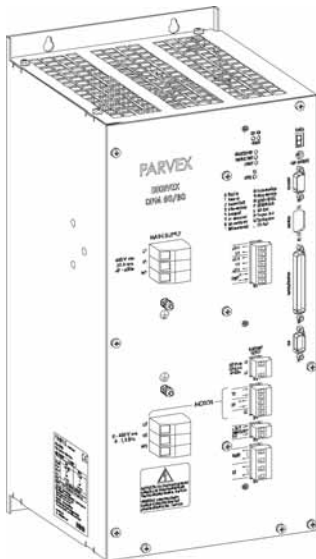

PRODUCT RANGE

1 - « BRUSHLESS » SERVODRIVES

TORQUE OR POWER RANGES

- **BRUSHLESS SERVOMOTORS, LOW INERTIA, WITH RESOLVER**
Very high torque/inertia ratio (high dynamic performance machinery):
 - ⇒ NX -HX - HXA 1 to 320 N.m
 - ⇒ NX - LX 0,45 to 64 N.m
High rotor inertia for better inertia load matching:
 - ⇒ HS - LS 3,3 to 31 N.m
Varied geometrical choice :
 - ⇒ short motors range HS - LS 3,3 to 31 N.m
 - ⇒ or small diameter motors : HD, LD 9 to 100 N.m
Voltages to suit different mains supplies :
 - ⇒ 230V three-phase for «série L - NX»
 - ⇒ 400V, 460V three-phase for «série H - NX»
- **"DIGIVEX Drive" DIGITAL SERVOAMPLIFIERS**
 - ⇒ SINGLE-AXIS DSD
 - ⇒ COMPACT SINGLE-AXIS D μ D, DLD
 - ⇒ POWER SINGLE-AXIS DPD
 - ⇒ MULTIPLE-AXIS DMD
- "PARVEX MOTION EXPLORER" ADJUSTING SOFTWARE

2 - SPINDLE DRIVES

- **SPINDLE SYNCHRONOUS MOTORS**
 - ⇒ "HV" COMPACT SERIES
 - ⇒ "HW" ELECTROSPINDLE, frameless, water-cooled motor From 5 to 110 kW
up to 60,000 rpm
- **"DIGIVEX" DIGITAL SERVOAMPLIFIERS**

3 - DC SERVODRIVES

- **"AXEM", "RS" SERIES SERVOMOTORS** 0.08 to 13 N.m
- **"RTS" SERVOAMPLIFIERS**
- **"RTE" SERVOAMPLIFIERS** for DC motors + resolver giving position measurement

4 - SPECIAL ADAPTATION SERVODRIVES

- **"EX" SERVOMOTORS** for explosive atmosphere
- **"AXL" COMPACT SERIES SERVOREDUCTERS** 5 to 700 N.m

5 - POSITIONING SYSTEMS

- **Numerical Controls « CYBER 4000 »** 1 to 4 axes
- **"CYBER 2000" NC** 1 to 2 axes
- **VARIABLE SPEED DRIVE - POSITIONER**
 - ⇒ SINGLE-AXIS DSM
 - ⇒ POWER SINGLE-AXIS DPM
 - ⇒ MULTIPLE-AXIS MM
- **ADJUSTMENT AND PROGRAMMING SOFTWARE** PARVEX MOTION EXPLORER

DIGIVEX Power Motion Servoamplifier

CONTENTS

SAFETY INSTRUCTIONS	4
PRODUCT RANGE	2
1. GENERAL PRESENTATION	6
1.1 List of published DIGIVEX Motion manuals	6
1.2 General Concepts of «DIGIVEX Power Motion»	6
1.3 System components	7
2. GENERAL CHARACTERISTICS	9
2.1 Mains characteristics	9
2.2 Servoamplifier General Characteristics	9
2.3 General characteristics of the DPM	10
3. COMPLIANCE WITH STANDARDS	11
4. DIMENSIONS, ASSEMBLY, MASS, LABELLING, CODING	12
4.1 Dimensions, Assembly and Mass	12
4.2 Labeling and coding	16
4.3 Front panel, terminal blocks and SUB-D plugs	18
4.3.1 Description of terminal blocks and sockets	18
4.3.2 Description of 7-segment display and LEDs	19
4.3.3 Rotary mini-switch setting (ADDRESS)	19
4.3.4 Diagrams	20
4.4 Accessories	24
4.4.1 Input mains filter	24
4.4.2 Inductors for long cables	24
5. ELECTRICAL CONNECTIONS	31
5.1 General Wiring Requirements	31
5.1.1 Appliance handling	31
5.1.2 Electromagnetic compatibility	31
5.1.3 DIGIVEX Power Motion Sub-D connectors	32
5.2 Typical Connection Diagram	32
5.2.1 Surge Suppressor	36

DIGIVEX Power Motion Servoamplifier

5.3	Power component dimensioning	37
5.4	MAIN SUPPLY Connection (Terminal block B1)	37
5.5	Auxiliary supply Connection (Terminal block B2)	38
5.6	Brake Supply Connection (Terminal block B3)	38
5.7	Earth connection	39
5.8	Short-circuit capability	39
5.9	Motor end connection	39
5.9.1	Terminal block B4 and B5	39
5.9.2	Motor Power connection	40
5.9.3	Terminal block connection	40
5.9.4	Power connector connection	41
5.9.5	"POWER" Cable Definition	42
5.9.6	Guidelines for long cables between the motor and drive	43
5.9.7	Holding Brake Connection	44
5.9.8	Thermal protection Connection	44
5.9.9	Motor Ventilation Connection	44
5.10	Automatic control Input / Output connection	45
5.10.1	Terminal block B6 and B7	45
5.10.2	main contactor control	46
5.11	Resolver Connection	47
5.11.1	Description	47
5.11.2	Sub-D connector X4:"Resolver"	48
5.11.3	Cables	48
5.12	FIELDBUS Connections	50
5.12.1	SUB-D X1 plug : FIELDBUS	50
5.12.2	CANopen connections and cables	50
5.12.3	Profibus connections and cables	50
5.13	Input/Output connection	51
5.13.1	SUB-D X2 socket: Inputs/Outputs	51
5.13.2	Input/Output characteristics	52
5.13.2.1	Logic outputs (out0 - out7)	52
5.13.2.2	Analogue output (outa)	52
5.13.2.3	Logic inputs (in0 - in 15)	53
5.13.2.4	Analogue input (ina)	54
5.13.3	Cable	54
5.14	Encoder emulation option connection (SC6639)	56
5.14.1	Description	56
5.14.2	Sub-D connector X3: encoder emulation option	56
5.14.3	Programming resolution and zero mark position	57
5.14.4	Electrical characteristics	57
5.14.5	Cable	59
5.15	External encoder input option connection (SC6638)	61

DIGIVEX Power Motion Servoamplifier

5.15.1	Description	61
5.15.2	SUB-D X3 sockets: encoder input option	62
5.15.3	Cable	62
5.16	Connecting the SinCos encoder input option (SC6645)	66
5.16.1	Description	66
5.16.2	SUB-D X3 plug: Encoder input option.	67
5.16.3	Cables	67

6. COMMISSIONING - DIAGNOSTICS **69**

6.1	Start Up Sequence	69
6.1.1	Prior Checks	69
6.1.2	Commissioning with PME-DIGIVEX Motion	69
6.2	Initialization Sequence	70
6.3	Stop Sequence	70
6.3.1	Description of stop sequence times	71
6.3.2	Stop due to removal of mains	71
6.3.3	Stop following a fault on mains side	71
6.3.4	Stop following a fault on motor side	71
6.4	Detecting Reasons for Stoppage	72
6.4.1	LED display - power supply function	72
6.4.2	Current Monitoring	73
6.4.3	Temperature Monitoring	74
6.4.4	7-segment display status	75

7. UL CERTIFICATE **76**

Characteristics and dimensions subject to change without notice.

YOUR LOCAL CORRESPONDENT


SSD Parvex SAS
8 Avenue du Lac / B.P 249 / F-21007 Dijon Cedex
Tél. : +33 (0)3 80 42 41 40 / Fax : +33 (0)3 80 42 41 23
www.SSDdrives.com

DIGIVEX Power Motion Servoamplifier

SAFETY

Servodrives present two main types of hazard :

- Electrical hazard

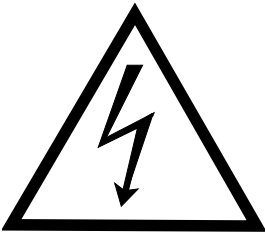

Servoamplifiers may contain non-insulated live AC or DC components. Users are advised to guard against access to live parts before installing the equipment.

Even after the electrical panel is de-energized, voltages may be present for more than a minute, until the power capacitors have had time to discharge.

Specific features of the installation need to be studied to prevent any accidental contact with live components :

- Connector lug protection ;
- Correctly fitted protection and earthing features ;
- Workplace insulation (enclosure insulation humidity, etc.).

General recommendations :

- Check the bonding circuit;
- Lock the electrical cabinets;
- Use standardised equipment.



- Mechanical hazard

Servomotors can accelerate in milliseconds. Moving parts must be screened off to prevent operators coming into contact with them. The working procedure must allow the operator to keep well clear of the danger area.

All assembly and commissioning work must be done by **qualified** personnel who are familiar with the safety regulations (e.g. VDE 0105 or accreditation C18510).

DIGIVEX Power Motion Servoamplifier

Upon delivery

All servoamplifiers are thoroughly inspected during manufacture and tested at length before shipment.

- Unpack the servoamplifier carefully and check it is in good condition.
- Also check that data on the manufacturer's plate complies with data on the order acknowledgement.

If equipment has been damaged during transport, the addressee must file a complaint with the carrier by recorded delivery mail within 24 hours.

Caution :


The packaging may contain essential documents or accessories, in particular :

- User Manual,
- Connectors.

Storage

Until installed, the servoamplifier must be stored in a dry place safe from sudden temperature changes so condensation cannot form.

Special instructions for setting up the equipment

CAUTION	
	<p>For this equipment to work correctly and safely it must be transported, stored, installed and assembled in accordance with this manual and must receive thorough care and attention.</p> <p>Failure to comply with these safety instructions may lead to serious injury or damage.</p> <p>The cards contain components that are sensitive to electrostatic discharges. Before touching a card you must get rid of the static electricity on your body. The simplest way to do this is to touch a conductive object that is connected to earth (e.g. bare metal parts of equipment cabinets or earth pins of plugs).</p>

1. GENERAL PRESENTATION

1.1 List of published DIGIVEX Motion manuals

◆ DIGIVEX Single Motion (DSM) User Manual	(DSM)	PVD3515
◆ DIGIVEX Power Motion (DPM) User Manual	(DPM)	PVD3522
◆ DIGIVEX Multi Motion (DMM) User Manual	(DMM)	PVD3523
◆ DIGIVEX Motion - CANopen		PVD3518
◆ DIGIVEX Motion - Profibus		PVD3554
◆ PME-DIGIVEX Motion Adjustment Manual		PVD3516
◆ DIGIVEX Motion Directory of Variables		PVD3527
◆ DIGIVEX Motion Programming		PVD3517
◆ DIGIVEX Motion - Cam Function		PVD3538
◆ PME Tool kit User and Commissioning Manual		PVD3528
◆ CANopen - CAN Bus Access via CIM03		PVD3533
◆ CANopen - Remote control using PDO messages		PVD3543
◆ "Block Positioning" Application Software		PVD3519
◆ "Fly shear linear cutting" software application		PVD3531
◆ "Rotary blade cutting" software application		PVD3532
◆ Motor user's manuals:		
◇ HX/HS/HD		PVD3490
◇ NX		PVD3535
◇ HW		PVD3496

1.2 General Concepts of «DIGIVEX Power Motion»

"DPM" servoamplifiers are designed to control magnet-type synchronous brushless motors from the NX and H ranges.

A box-type electronic control system including :

- ◆ A power supply function with direct 400V or 480V/50-60Hz mains input and 550V DC bus voltage output This module also controls energy regeneration to the mains network..
- ◆ A servomotor control function (power and resolver), for axis or spindle drive motors.

They are designed to provide:

- positioning or synchronization functions from,
 - ◆ either the motor resolver,
 - ◆ or an external incremental encoder
- plc-type logic functions
- message or parameter transfers via a CANopen or Profibus field bus.

Parameters specification (current, speed, position) and programming (pseudo BASIC or applicative programs) are done by PC with "PME - DIGIVEX Motion" software (under WINDOWS).

A 7-segment display provides a direct readout of the main drive status.

DIGIVEX Power Motion Servoamplifier

1.3 System components

A DPM drive system comprises as a minimum:

- A DPM drive-positioner, 480V three-phase, or 400 V three-phase supply depending on the product number
- A mains filter for compliance with CE requirements
- An H or NX series (400V/460V supply) brushless motor with a resolver-type position sensor and thermal protective sensor. The motor may be equipped with a brake (see motor code).
- An auxiliary AUX power supply for the regulation section of the DPM,
- A control unit for activating the stored programs via DPM inputs / outputs (contacts, push buttons, and possibly an external plc).


It may also feature:

- Additive chokes located close to the drive between the motor and drive where long cables are used.
 - An option
 - ◆ "external encoder input" for "master-slave" type operations or for applications requiring position acknowledgement on the machine and not the motor.
- OR
- ◆ "encoder emulation output" (with resolution adjustable from 1 to 16,384 marks per revolution).
 - A μ Vision terminal for displaying messages or entering digital values (μ Vision terminal connected to drive via a CANopen type bus).
 - Connection cables (supplied by Parvex).

Regulation parameter specification, drive setting and user program entry or modification is done exclusively by PC with PME-DIGIVEX Motion software.

The drives are fitted, depending on the reference, with CANopen (DPMxxxxxC) or Profibus (DPMxxxxxP) communication inputs as standard.

DIGIVEX Power Motion Servoamplifier

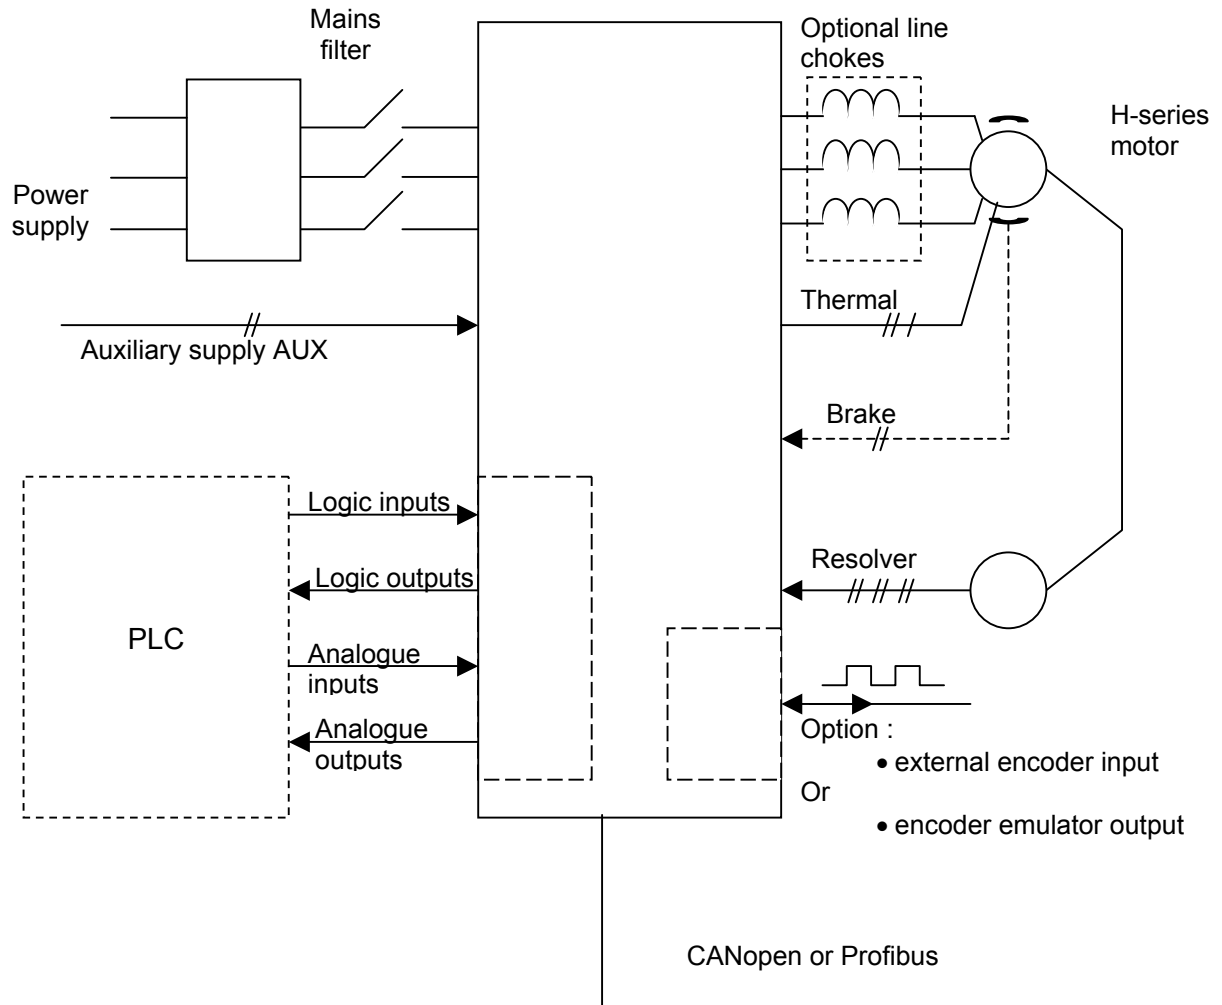

DIGIVEX Power Motion Servoamplifier

2. GENERAL CHARACTERISTICS

2.1 Mains characteristics

DIGIVEX Power Motion RATING \hat{O}	DPM 50/80	DPM 100/120	DPM 150	DPM 200	DPM 300
Frequency	48 to 62 Hz				
Minimum voltage	200 V rms.				
Maximum voltage	530 V rms				
Usual voltage	400/480 V +/- 10%				
Rated rms current	32 A	64 A	100 A	130A	200A
Direct voltage Gleichspannung	270 to 750 V				

The system can be operated with 230V rms mains supply but the speeds and powers shown in the motor/servoamplifier characteristics are no longer achieved.

An external mains filter is required for compliance with electromagnetic compatibility requirements.

The DIGIVEX Power Motion supply features IGBT transistors. Braking energy is returned to the mains supply.

Mains monitoring :

- no phase,
- overcurrent.
- Voltage between phases too great

2.2 Servoamplifier General Characteristics

TYPE	MAINS	BUS RATED VOLTAGE	CONTROLLABLE POWER	BRAKING CAPACITY BY REGENERATION TO NETWORK	PEAK PERMANENT CURRENT	PEAK PULSE CURRENT
DPM 50/80	400/480 V 3ph 50/60 Hz Max 480 + 10%	550 V	20 kW	20 kW	50 A	80 A
DPM 100/120	400/480 V 3ph 50/60 Hz Max 480 + 10%	550 V	40 kW	40 kW	100 A	120 A
DPM 150	400/480 V 3ph 50/60 Hz Max 480 + 10%	550 V	60 kW	60 kW	150 A	150 A
DPM 200	400/480 V 3ph 50/60 Hz Max 480 + 10%	550 V	80 kW	80 kW	200 A	200 A
DPM 300	400/480 V 3ph 50/60 Hz Max 480 + 10%	550 V	120 kW	120 kW	300 A	300 A

(*) UL and c UL required: Power is limited to 16kW

An external fan is required to achieve the stated performances for the DPM 200 and 300 (see Section 4.4 "Accessories")

DIGIVEX Power Motion Servoamplifier

	DPM 50/80	DPM 100/120	DPM 150	DPM 200	DPM 300
POWER DISSIPATED IN KW	0,7	1	1,2	1,6	2,4
LOW-LEVEL CONSUMPTION IN W	35	40	45	75	100

2.3 General characteristics of the DPM

Power reduction with altitude	Above 1000 m, service power falls by 1% for every 100 m up to a maximum altitude of 4000 m
Operating temperature	Normal use: 0 - 40°C Above 40°C, service power fall by 20% for every 10°C up to a maximum temperature of 60°C. Drive stops when ambient temperature is higher than 60°C
relative humidity	85% (without condensation)
Storage temperature	-30°C to +85°C
Chopping frequency	50/80 and 100/120 : 8kHz 150-200-300 : 4KHz
Current bandwidth	600Hz to -3dB
Speed bandwidth	Up to 60Hz
Maximum speed	Driven by DIGIVEX : 60,000 rpm
Electrical protection	Galvanic insulation of power bridge Mean current protection in line with drive calibre Pulse current protection of drive and motor Rms current protection of motor Protection against short circuits at bridge output Mains network overvoltage
Mechanical protection	IP20 under IEC 529
Pollution degree	UL: 2: enclosure mounting
Other monitoring	Tracking error Motor temperature Drive temperature No resolver Brake supply Limit switches
User programs Memory sizes	FLASH_DM : 512 Kilobyte PROG_DM : 256 Kilobyte

Communication bus:

- CANopen: DPMxxxxxC reference positioner drives
- Profibus: DPMxxxxxP reference positioner drives

DIGIVEX Power Motion Servoamplifier

3. COMPLIANCE WITH STANDARDS

DIGIVEX Power Motion

The CE mark of this product is affixed to the front panel (silk-screen printing).


The DIGIVEX Power Motion 100/120, 150, 200, and 300 have the CE marking under the European Directive 89/336/EEC as amended by Directive 93/68/EEC on electromagnetic compatibility as well as under the Electrical Safety Directive of Low Voltage Directive 73/23/EEC amended by Directive no. 93/68/EEC.

The European Directive concerning electromagnetic compatibility refers to the harmonised generic standards EN 50081-2 of December 1993 (Electrical Compatibility - Generic Standard for Emissions - Industrial Environments) and EN 50082-2 of June 1995 (Electromagnetic Compatibility - Generic Standard for Immunity – Industrial Environments). These two harmonised generic standards are based on the following standards:

- EN 55011 of July 1991: Radiated and conducted emissions.
- ENV 50140 of August 1993 and ENV 50204: Immunity to radiated electromagnetic fields.
- EN 61000-4-8 of February 1994: Mains frequency magnetic fields.
- EN 61000-4-2 of June 1995: Electrostatic discharge.
- ENV 50141 of August 1993: Interference induced in cables.
- EN 61000-4-4 of June 1995: Rapid transient.

The Low Voltage Directive groups all the electrical safety standards together including the EN 60204-1 Standard which covers electrical fittings on industrial machinery.

The DIGIVEX Power Motion 50/80 complies with the CEI 1800-3 product standard ("electric power drives with variable speed") with the addition of an external filter in observance of the EN 55011 (radiated and conducted emissions) standard as well as an overvoltage protective device between phases and ground connection in accordance with the diagram below:

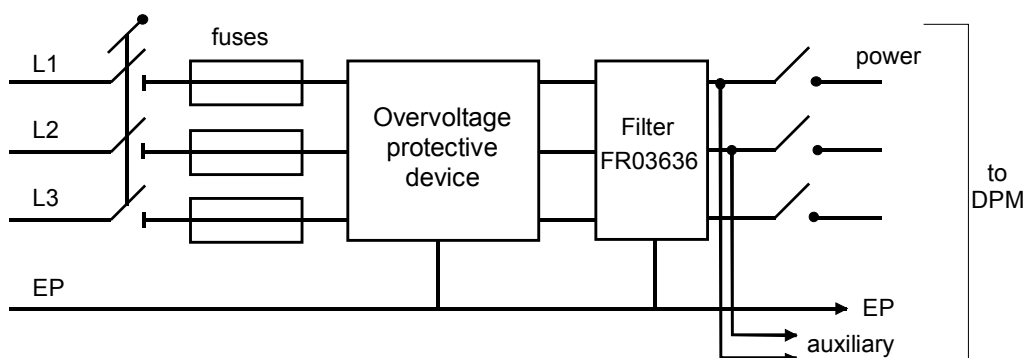

Type of overvoltage protective device to be associated with DPM 50/80: 15KA/440V

Compliance with the reference standards above implies observance of the wiring instructions and diagrams provided in this technical documentation which accompanies all equipment.

DIGIVEX Power Motion Servoamplifier

Incorporation in a machine

The design of this equipment allows it to be used in a machine subject to Directive 98/37/EC of 22/06/98 (Machinery Directive), provided that its integration (or incorporation and/or assembly) is done in accordance with trade practices by the machine manufacturer and in accordance with the instructions in this booklet.

UL and c UL conformity

The DIGIVEX Power Motion 50/80 product is certified UL and c UL with the following operating characteristics:

Main voltage	Input current (Arms)	Continuous output power
400V	32A	16 kW
480V	30A	18 kW

(see certificate chapter 7).

Electromagnetic compatibility

The CEI 1800-3 ("electric power drives with variable speed") standard defines the compatibility criteria that have to be observed by an electronic device in an industrial environment. Please find below several important points concerning the harmonic emission rate for drives and the impedance for the mains network to which it is connected.

Harmonic levels

The harmonic content of the mains network currents varies depending on whether the drive consumes power or whether it returns energy to the mains supply. When the drive issues rated voltage, the level of harmonic distortion ($THD = \frac{\sqrt{I_{eff}^2 - I_{h1}^2}}{I_{h1}}$) is approx. 50%. Contrarily, if the drive returns its rated voltage to the mains supply, the "THD" is approx. 30%. Please do not hesitate to contact us if you require further information.

Voltage fluctuation


The repetitive working of a drive consuming then returning electrical energy to the mains supply can produce voltage fluctuations in the mains network to which it is connected. In order for the drive to work properly and to satisfy the limits relative to the "switching slots", the rated voltage of the mains network must be at least equal to three times that of the drive.

4. DIMENSIONS, ASSEMBLY, MASS, LABELLING, CODING


4.1 Dimensions, Assembly and Mass

See next pages, Drawing FELX 306784
FELX 306125
FELX 306127

DIGIVEX Power Motion Servoamplifier

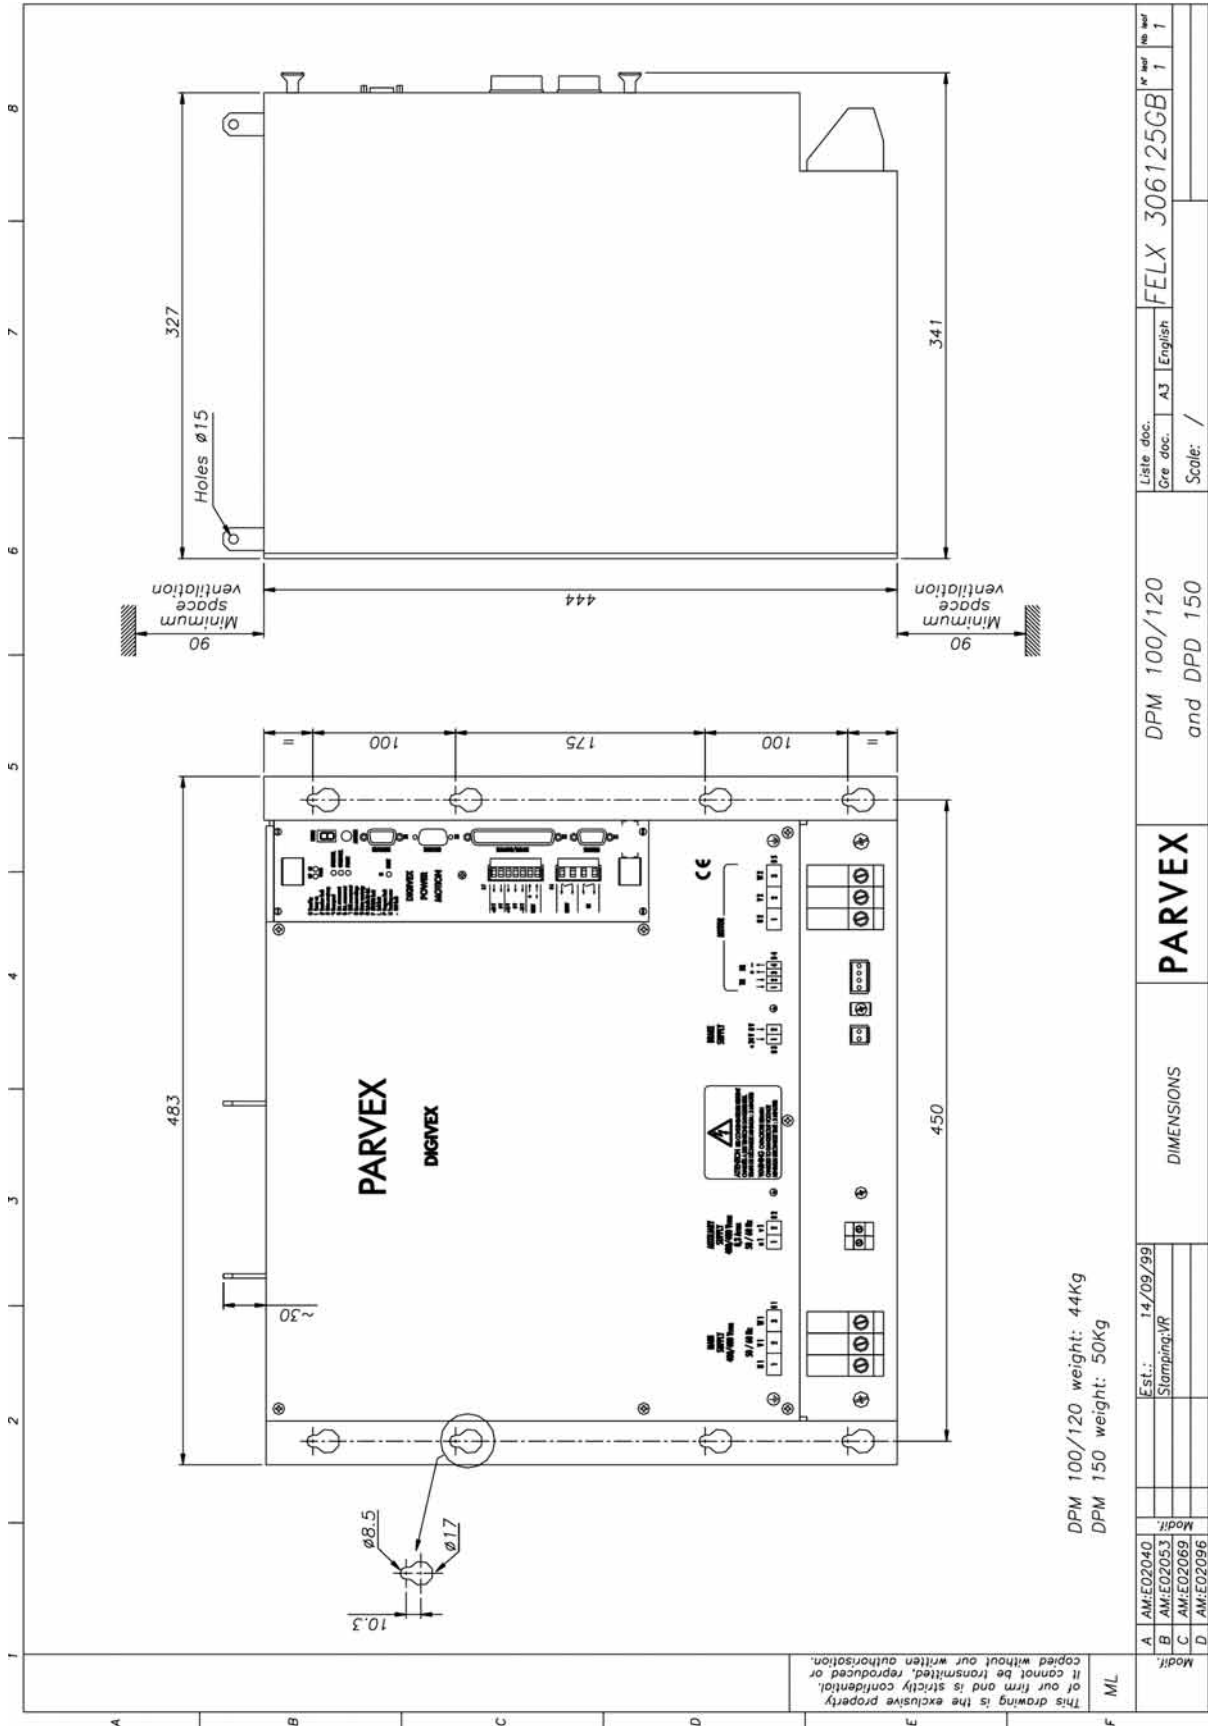

DIGIVEX Power Motion Servoamplifier

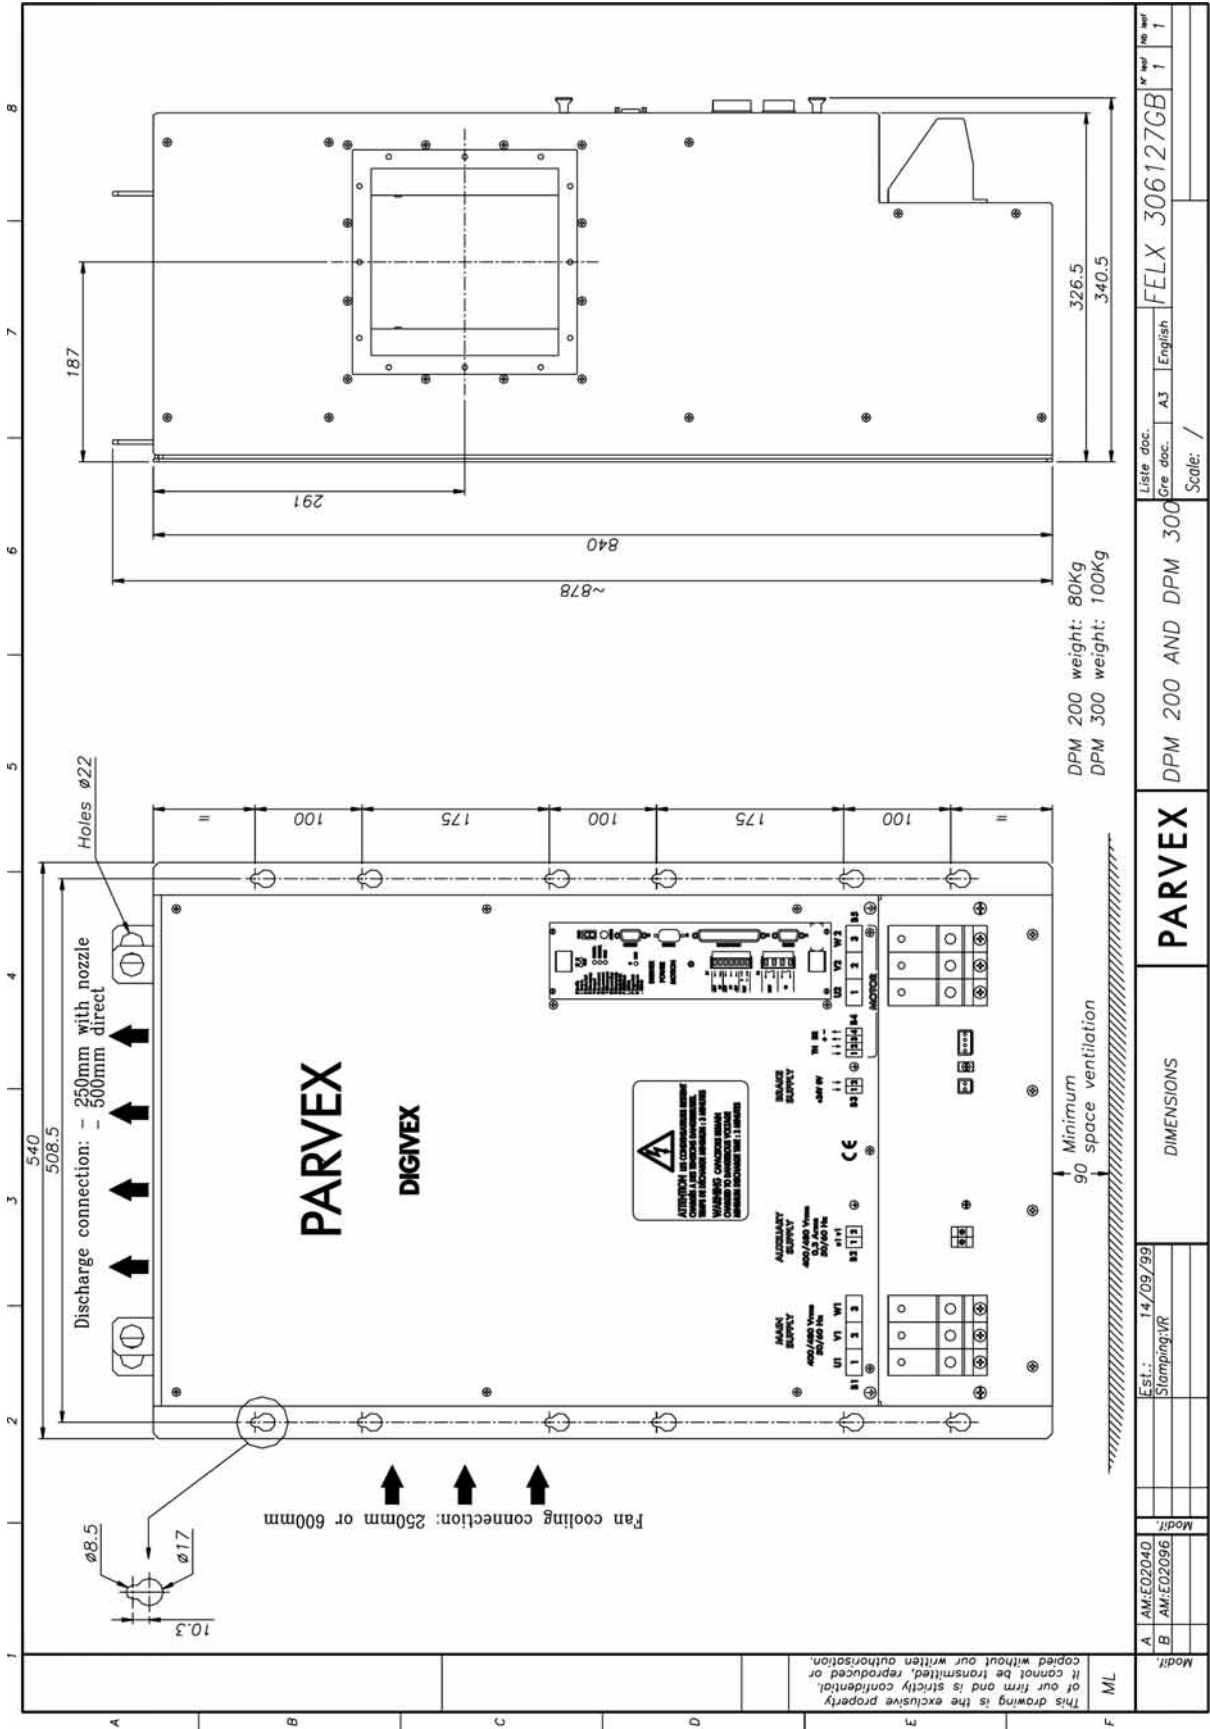

DIGIVEX Power Motion Servoamplifier

4.2 Labeling and coding

Markings :

- **On DPM 50/80 (DIGIVEX Power Motion 50/80) :**
 - * one front panel label as shown on model below

This label gives the electrical characteristics required by UL and c UL drive compliance.

PARVEX Made in France   **US**

AC SERVO
 Part. number : **DPM27050**

Serial Nr : 00250 Date : 07/03

	Input	Output
Voltage	400V ^{+30%} _{-10%}	0 - 400V
Phase	3	3
Current	32A	31A
Freq.	47 - 63Hz	0 - 1,5kHz
Motor	16kW (1,3 Uout x Iout) / 20HP	

Classe 1 IP 20 Temperature : refer to user manual.

ATTENTION : Chocs Electriques
 Les condensateurs restent chargés à des tensions dangereuses.
 Temps de décharge minimum : 3 min.
 Se référer à la notice d'utilisation.

WARNING : Risk of Electric Shock
 Capacitors remain charged to dangerous voltage.
 Minimum discharge time : 3 min. Refer to user manual.

www.parvex.com
 Fax : 33 (0) 3 80 42 41 19



Meaning of label indications :

- AC SERVO : Alternating current converter
- DPM 27050 : DPM50/80 servoamplifier code
- Serial Nr : Servoamplifier serial number
- Date : Manufacturing date
- Input : Input characteristics
- Output : Output characteristics
- Voltage : RMS Voltage
- Phase : Phase number
- Current : RMS Current
- Freq.: Fréquency in Hz
- Moteur : Motor power in kW et in HP
- Classe : Service class according to NF EN60146 standard, 1= permanent
- IP20 : Protection indice according to NF EN 60529 standard

- **On DPM (DIGIVEX Power Motion) :**
 - * one front panel label as in the model below :

Convertisseur CA/CA DPM17100

E: 3X400/480V 64A fn:50/60Hz

S: 0-650V Ic=100A Classe:1 N.Série:

MADE IN FRANCE Date:

Meaning of label markings :

- CA/CA converter alternating current / alternating current converter
- DPM----- DIGIVEX Power Motion servoamplifier code
- E: 3 x 400V --A Input voltage and current
- fn Frequency
- S: 0-55V --Â Output voltage and permanent output current (Amps. Peak)
- Classe Service class to standard NF EN60146, 1 = permanent
- Serial number and date of manufacture

DIGIVEX Power Motion Servoamplifier

- **On DPC (DIGIVEX Power Control) removable block (excluding DPM 50/80):**

Drive customization parameters are recorded in a plug-in EEPROM. They can only be read via a PC with PME DIGIVEX Motion software.

- **For DPM 50/80**

The cover of the drive must be removed to access the EEPROM located on the SP6606 card

Codes

Power supply 400/480V

CODE	FUNCTION
DPM27050-	DPM 50/80
DPM17100-	DPM 100/120
DPM17150-	DPM 150
DPM17200-	DPM 200
DPM17300-	DPM 300

For DPM 200 and DPM 300 devices the sales reference for compulsory fan-cooling can be found in 4.4.

DPMxxxxxC : DPM with fieldbus interface CANopen

DPMxxxxxP : DPM with fieldbus interface Profibus

DIGIVEX Power Motion Servoamplifier

4.3 Front panel, terminal blocks and SUB-D plugs

4.3.1 Description of terminal blocks and sockets

All the input/outputs required for operation are arranged on the front panel in the form of :

- B1 "MAIN SUPPLY".
- B2 "AUXILIARY SUPPLY".
- B3 "BRAKE SUPPLY".
- B4 auxiliary power supply terminal block.
- B5 terminal block for automatic control connection.
- B6 "READY" (Drive ready for connection to mains), "OK" (regulation and power OK)
- B7 "RESET"

Connectors with metal-plated or metallic covers.

ITEM REF.	CONNECTOR TYPE (cable end)	FUNCTION	MAX. CONDUCTOR CROSS-SECTION
X1 FIELD BUS	9-pin plug for soldering	Fieldbus connection	max. 0.5 mm ² on soldering barrel
X2 INPUTS/ OUTPUTS	37-pin plug for soldering	Logic and analog inputs / output	max. 0.5 mm ² on soldering barrel
X3 ENCODER	9-pin plug if encoder emulator output	Encoder emulation output (option)	max. 0.5 mm ² on soldering barrel
	9-pin socket for soldering	Incremental encoder input (option)	
X4 RESOLVER	9-pin socket for soldering	Resolver link	max. 0.5 mm ² on soldering barrel

- For the DPM 50/80:
The motor earth must be connected to the ground terminal.

- For the DPM 100/120, DPM 150, DPM 200 and DPM 300:
The motor earth must be connected to the Faston earth lug on the appliance. The SUB-D plugs used must be metal-coated (or metal) and provide continuous shielding through to the appliance's metal earth.

The equipment

- Receives the 230 V or 400V/480V mains supply through terminal block B1 and converts it into 550V dc voltage.
- Returns braking energy to the mains network (diode bridge + IGBT transistors).
- The single-phase 400V or 480V mains supply is fed into terminal block B2 to generate the auxiliary supplies ($\pm 15V, \pm 12V$ pour les DPM 50/80, 5V, 24V) required for regulation.
- 24V supply for the motor brake may be fed into terminal block B3.
- Ensures interface with automatic control via terminal blocks B6 and B7.

DIGIVEX Power Motion Servoamplifier

4.3.2 Description of 7-segment display and LEDs

- A 7-segment "STATUS" display shows the drive operating status.
- A green "POWER ON" LED indicates the auxiliary supply and power supply are on.
- A "POWER OFF" red LED indicates there is no power supply.
- An "OVERVOLT." red LED indicates excess mains or bus voltage.
- A "PHASE" red LED indicates no mains phase (three-phase appliances only).
- An "OVER CUR" red LED indicates either excessive internal current in the power supply or a problem with the capacitor precharging circuit (load current limiting resistor cut out or internal contactor damaged).

4.3.3 Rotary mini-switch setting (ADDRESS)

Each appliance in the same network CAN or Profibus must have a different subscriber number.

A rotating, 16-position, mini-switch is used to define the number of the appliance.

For information:

0	Prohibited
1	1*
2	2*
3	3
.	.
.	.
.	.
.	.
A	10
B	11
C	12
D	13
E	14
F	15

* The "1" and "2" addresses are prohibited to the Profibus bus


The subscriber code may be extended. Please ask for details.

Attention! For a subscriber number change to be acknowledged, the appliance must be switched off completely for a few seconds.

DIGIVEX Power Motion Servoamplifier


4.3.4 Diagrams

Front panel DPM 50/80

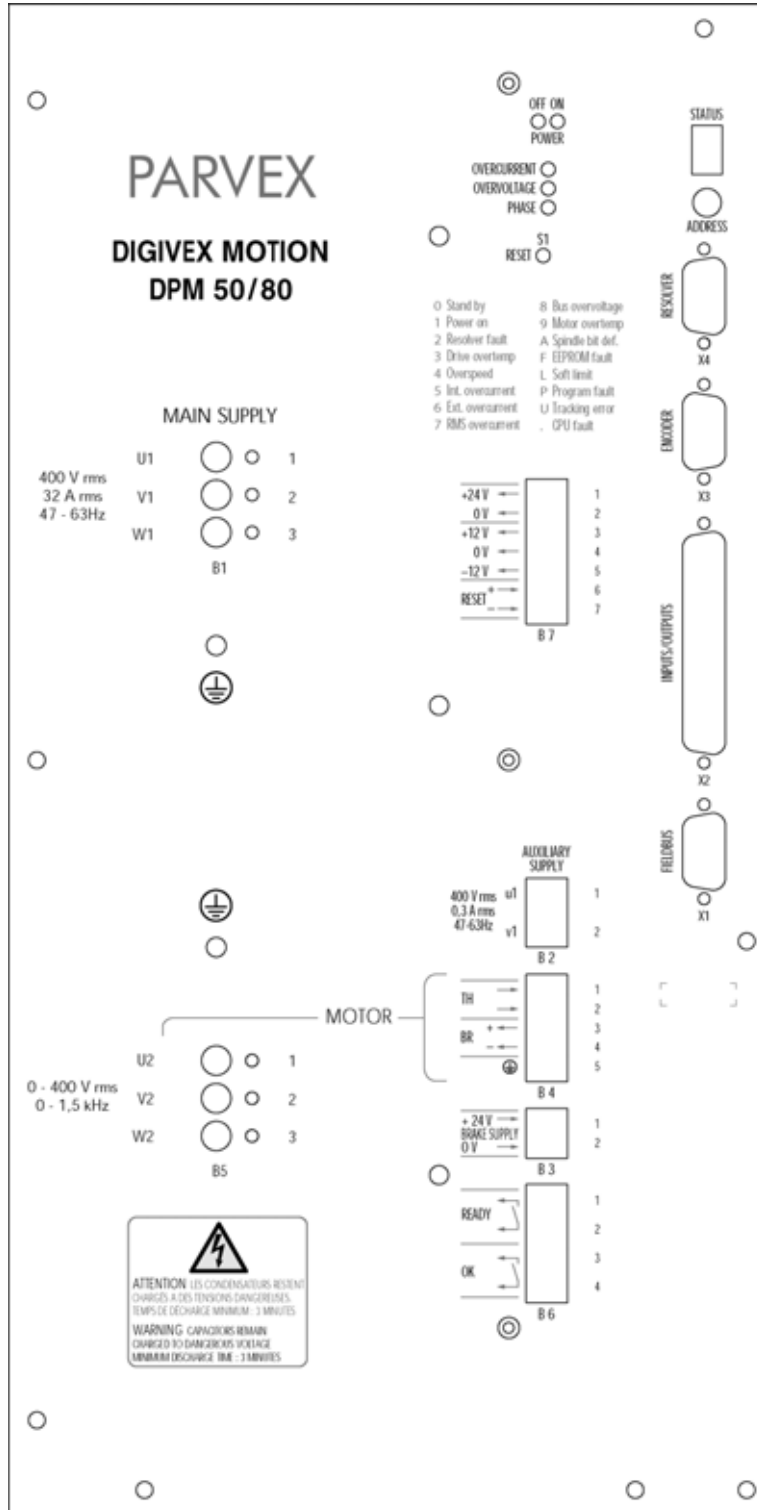


DIGIVEX Power Motion Servoamplifier

Front panel DPM 100/120 and DPM 150

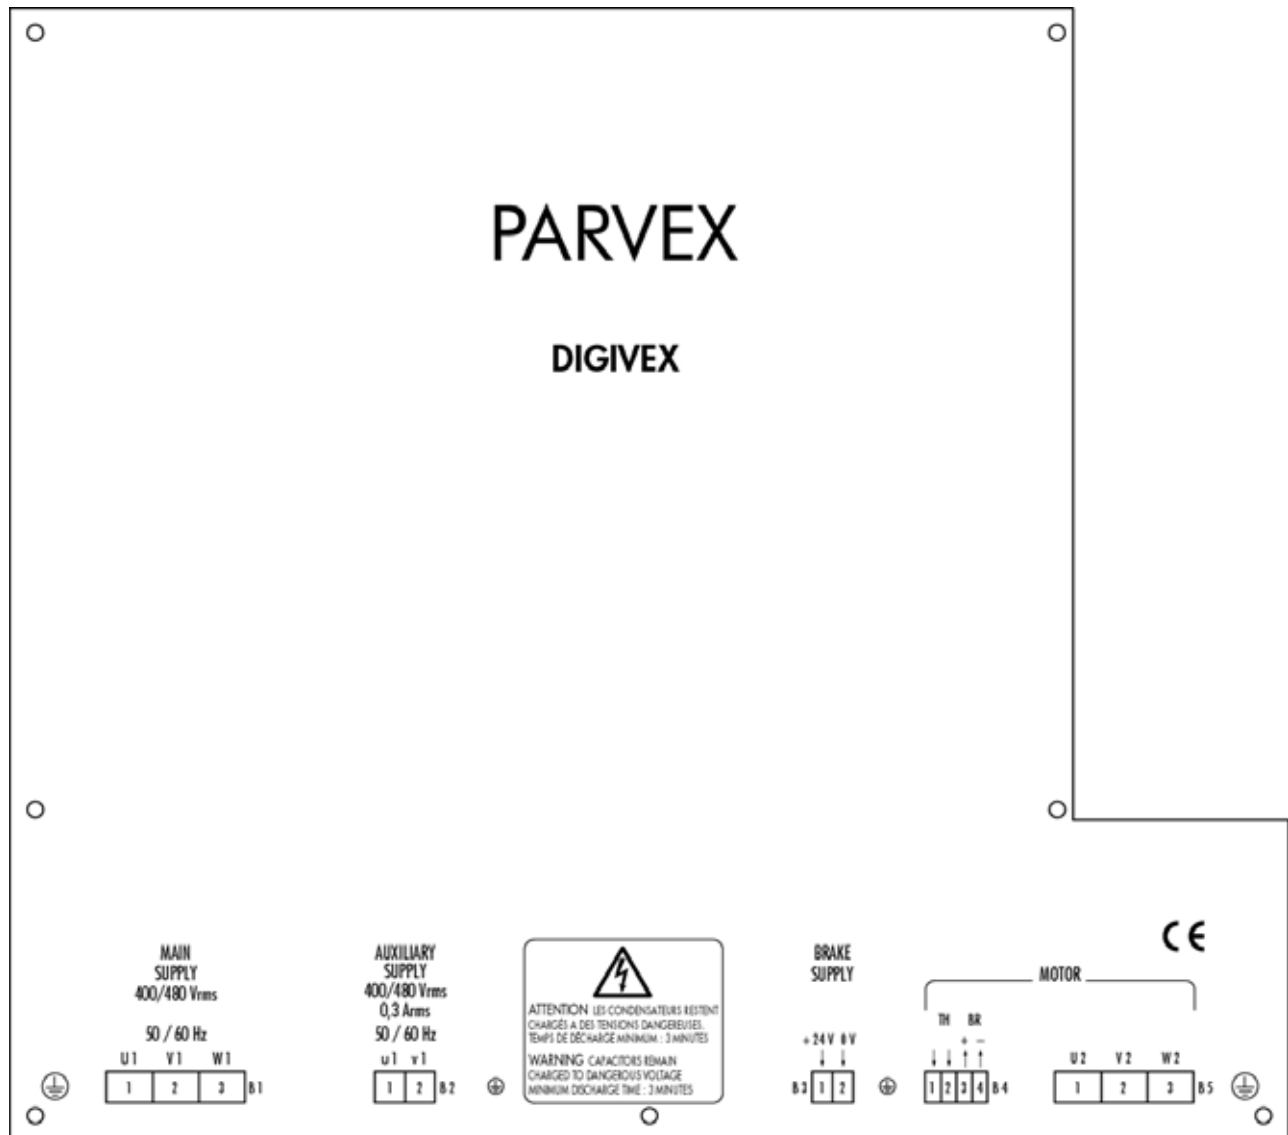


DIGIVEX Power Motion Servoamplifier

Front panel DPM 200 and DPM 300

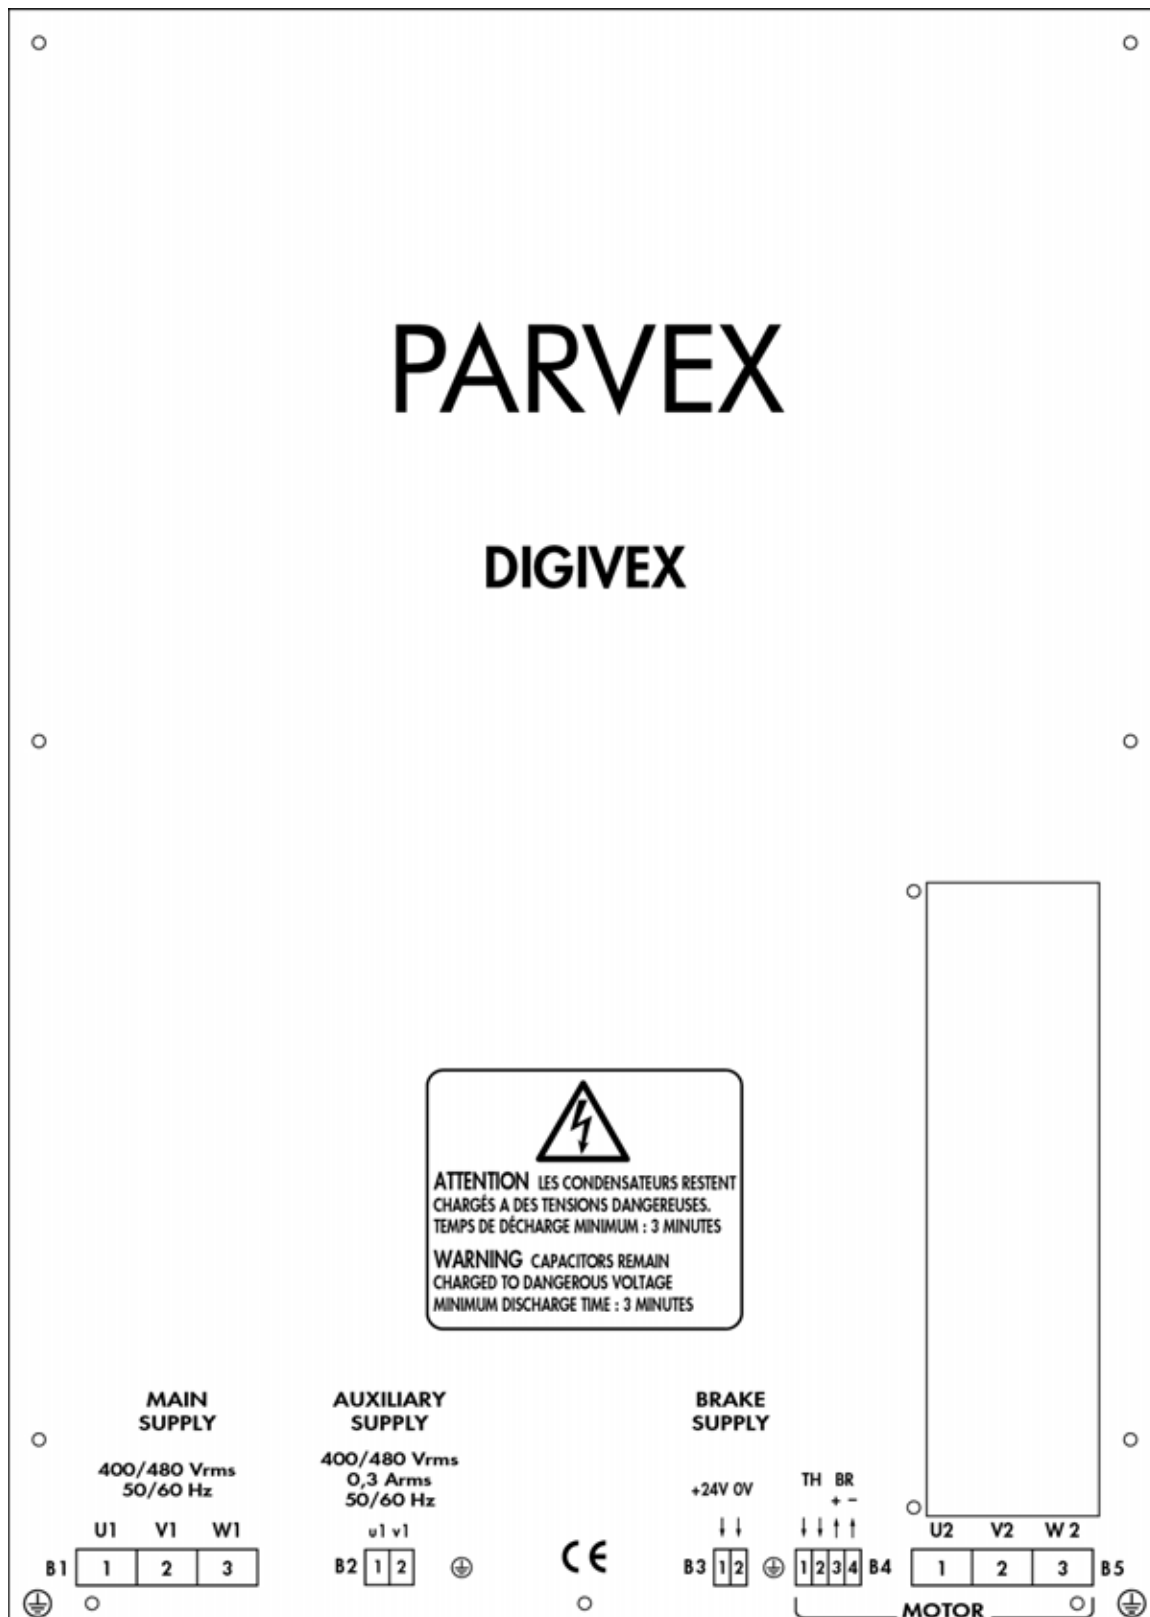

DIGIVEX Power Motion Servoamplifier

Front panel Mobile block For DPM 100/120, DPM 150, DPM 200 and DPM 300

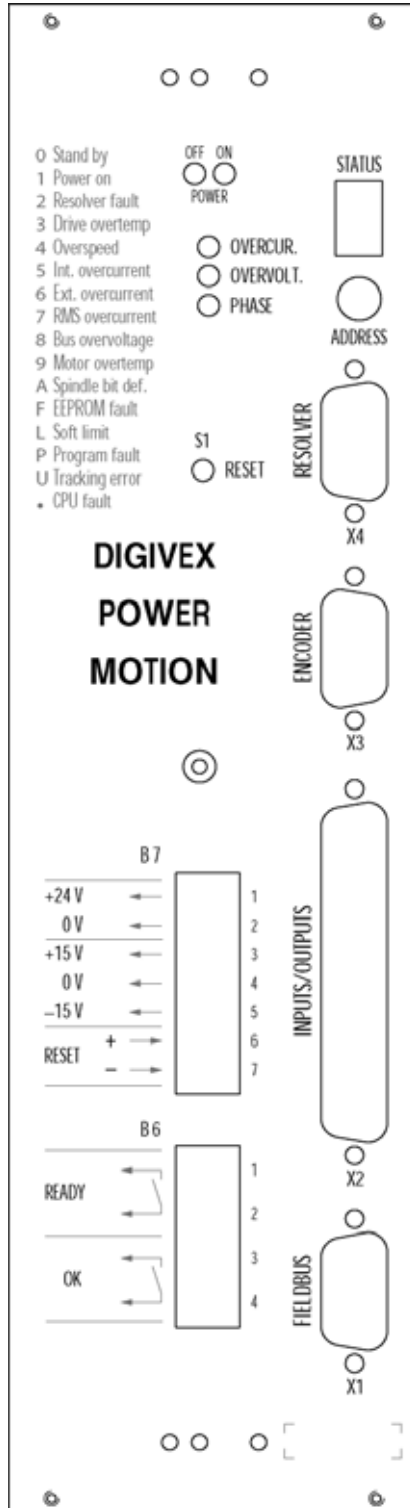

DIGIVEX Power Motion Servoamplifier

4.4 Accessories

4.4.1 Input mains filter

- ◆ For DPM 50/80: FR 03636
- ◆ For DPM 100/120: FR 03064
- ◆ For DPM 150: FR 03100
- ◆ For DPM 200: FR 03200
- ◆ For DPM 300: FR 03200

Dimensions as in drawing FELX 304967 and 305452 (see next pages).

4.4.2 Inductors for long cables

Inductances for long cables between motor and servoamplifier. Selection, see §5.8.6 Dimensions, see drawing FELX 302983 (next pages).

- **Ventilation**

CODE	FUNCTION
DPD/IS	DPM300/200 - Straight inlet
DPD/I90	DPM300/200 - Elbowed inlet
DPD/OS	DPM300/200 - Straight outlet
DPD/FOS	DPM300/200 - Straight fan outlet
DPD/FO90	DPM300/200 - Elbowed fan outlet
VN 10001	DPM300/200 - 400V 50Hz fan and 480V 60Hz fan
VN 02004	DPM300/200 - Hose
VN 02006	DPM300/200 - Protective mesh

DIGIVEX Power Motion Servoamplifier

Position	Text	Identification number	Weight
	MAINS FILTER 3 ph OUTLINE DIMENSIONS	FELX_304967GB P.	

** permissible section*

U_{in} : 440 Vac 50/60Hz
 T_a : 40°C
 Norm : EN 133200

Pos.	Standard Nr	Current	Dimensions		* Section	Weight
			A	B		
1	FR 03016	16A	241	201	4mm ²	3Kg
2	FR 03036	36A	251	201	10mm ²	3Kg
3	FR 03064	64A	308	231	25mm ²	4Kg

Standard Nr	Max. leakage current (50/60Hz) in mA	
	three-phase operation	unbalanced operation (start-up)
FR 03016	10	30
FR 03036	3	200
FR 03064	3	170


Service	Drawing	LR	Stamping	Order of execution	ML
A AME97016 - 22/01/97 - LR	D AME98056 - 12/05/98 - VR			Repeating	
B AME97162 - 20/11/97 - VR	E AME98175 - 09/11/98 - VR			Separate nomenclature of Nbr diff.	
C AME98035 - 11/03/98 - VR				Separate nomenclature of same Nbr	

Scale	SIZE	Family	N°: 1	Nb: 1
	A3			

PARVEX	MAINS FILTER 3 ph	FELX_304967GB
	OUTLINE DIMENSIONS	

This drawing is the exclusive property of our firm and is strictly confidential. It cannot be transmitted, reproduced or copied without our written authorization.

DIGIVEX Power Motion Servoamplifier

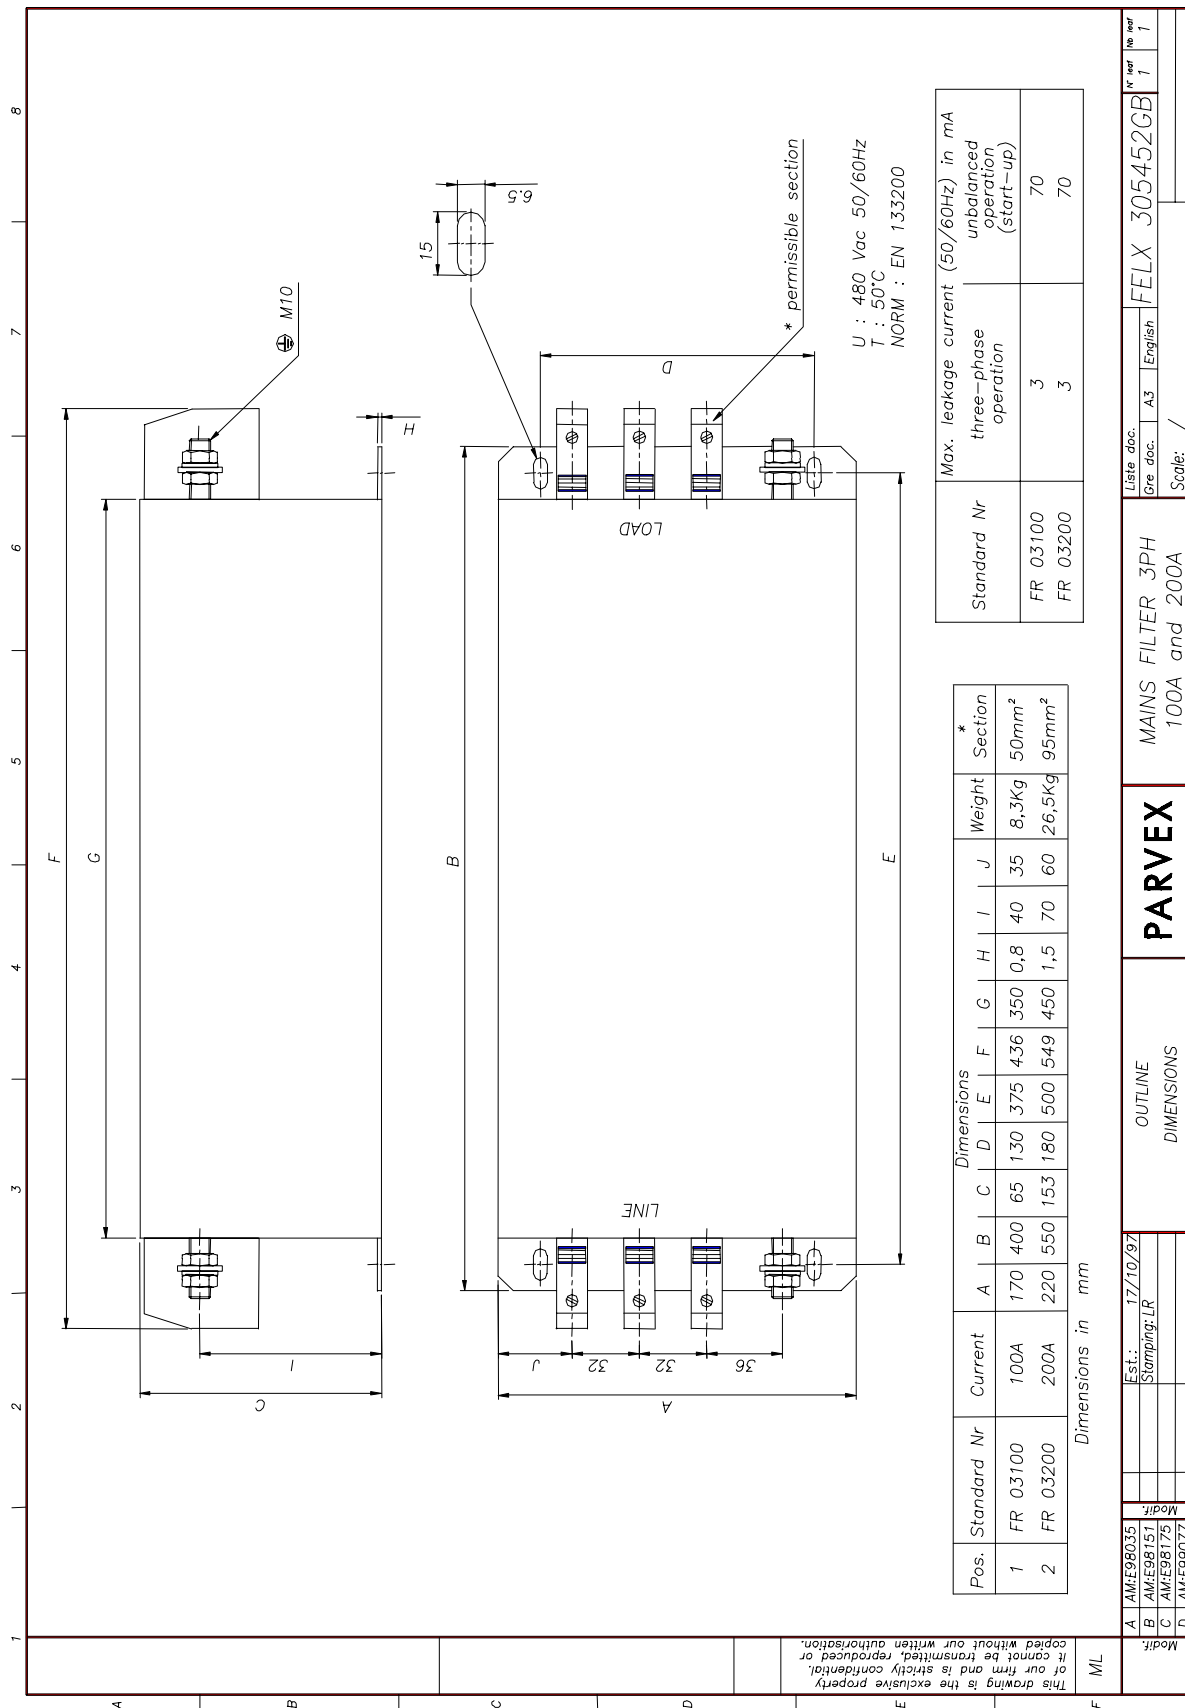

DIGIVEX Power Motion Servoamplifier

Position	Text	Identification number	Weight
	THREE PHASE CHOKE DIMENSIONS	FELX 302983GB	

No	Standard	Ct nom.	Choke nom.	A	B	C	H	H#	Fixing axD	D	connection area	M	Weight
SF	02025	26A	850uH	150	95	110	/	135	112x80	6	# 6mm ²	/	4,5kg
SF	02026	65A	340uH	175	95	95	165	180	53x68	6,5	16x16	6,5	9Kg
SF	02027	118A	190uH	290	116	135	210	/	230x100	8	20x20	9	13Kg
SF	02028	17A	1,3mH	160	95	/	/	115	112x71	6	# 6mm ²	/	4,2Kg
SF	02029	91A	245uH	220	135	160	160	/	166x114	6	20x20	9	15Kg
SF	02030	170A	130uH	235	120	165	240	/	185x100	9	25x28	11	19Kg
SF	02032	7,5A	400uH	132	75	85	/	103	94x55	6x10	# 4mm ²	/	1,9Kg


The dimensions are in mm

TERMINAL BLOCK CONNECTION

Service	Drawing	FM	Stamping	Order of execution	ML
A	17/12/92 - AJOUT SF 02032			Replacing	
B	24/02/97 - MISE A JOUR			Separate nomenclature of Nae dir.	
C	AME98035 - 11/03/98 - VR			Separate nomenclature of same Nae dir.	
PARVEX				Scale	SIZE
THREE PHASE CHOKE				/	A3
DIMENSIONS				Family	LEAF N° 1 Nb 1
FELX 302983GB					

This drawing is the exclusive property of our firm and is strictly confidential. It cannot be transmitted, reproduced or copied without our written authorisation.


DIGIVEX Power Motion Servoamplifier

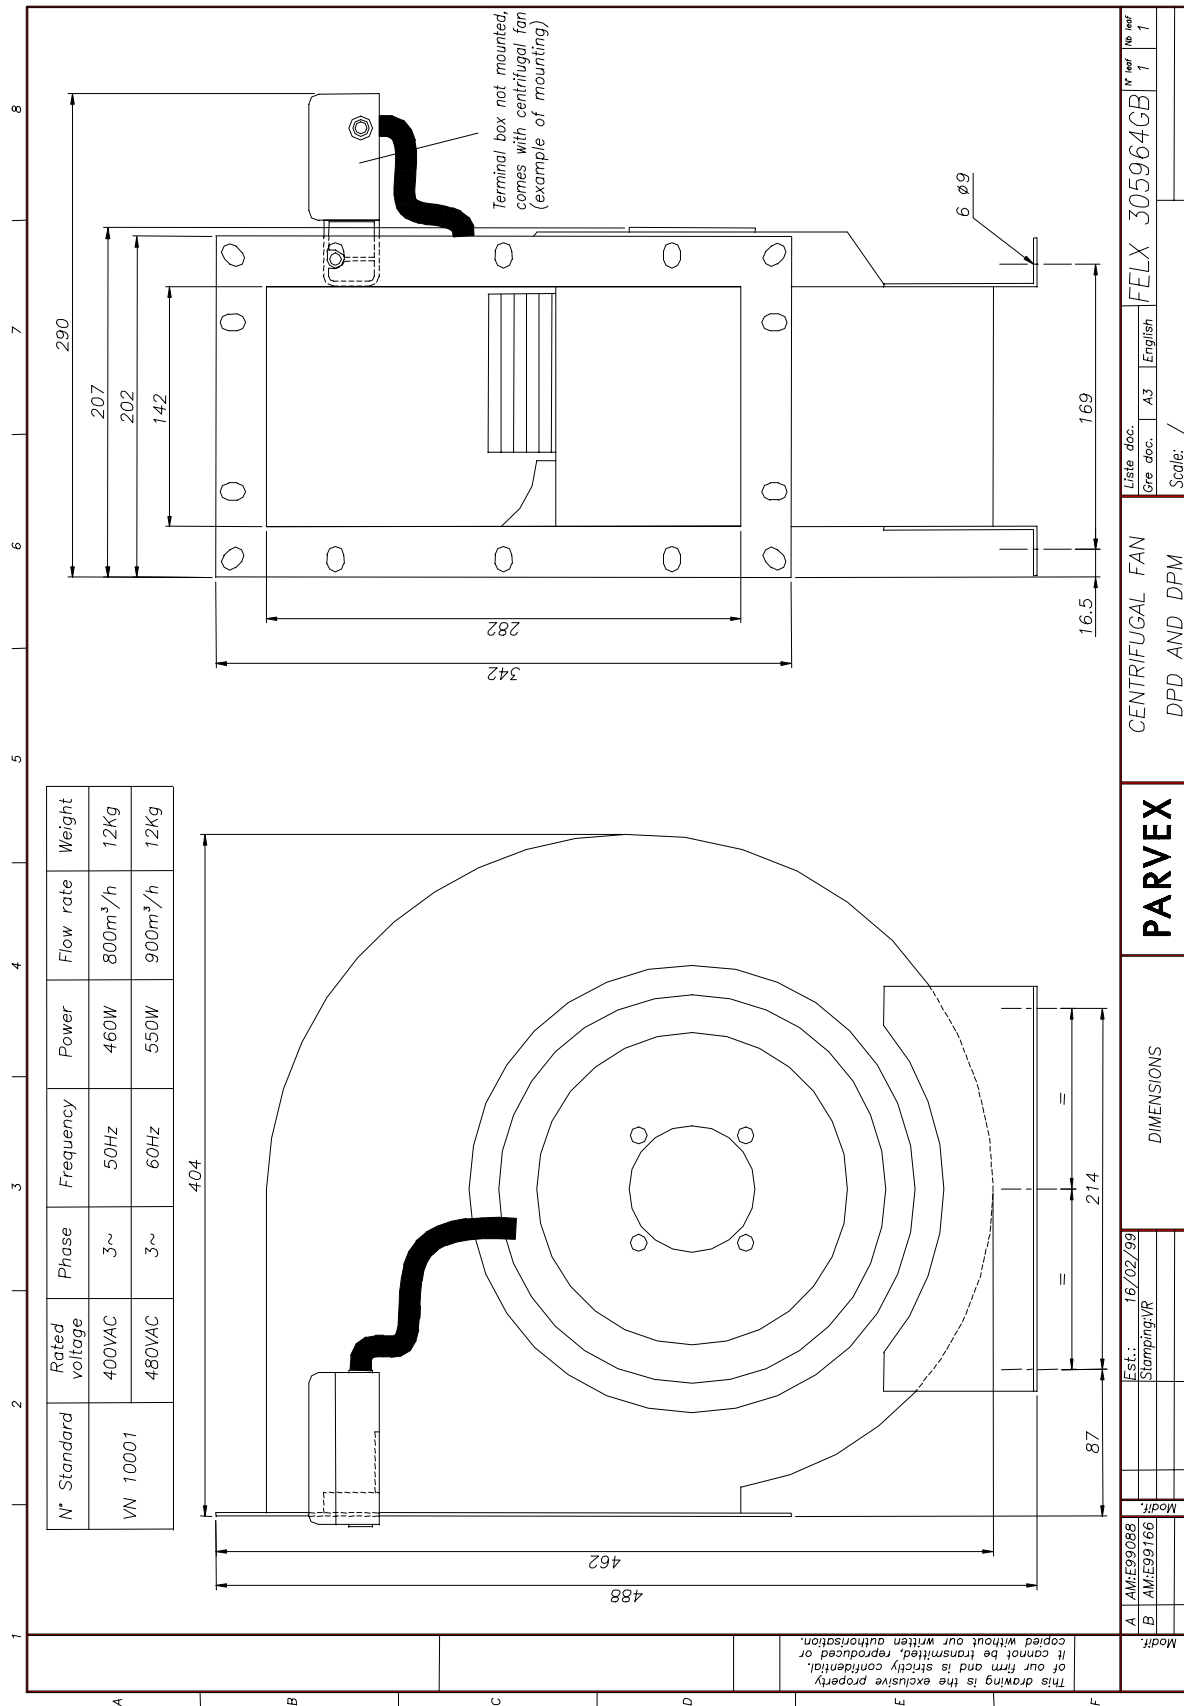

A AM:E9908E		Est.: 16/02/99		FELX 305964GB		N° ref 1	
B AM:E99166		Stamping/VR		CENTRIFUGAL FAN		N° ref 1	
Modif:		DIMENSIONS		DPD AND DPM		N° ref 1	
Modif:		Scale: /		Gre doc: A3		English	
Modif:		Liste doc:		Scale: /		N° ref 1	

This drawing is the exclusive property of our firm and is strictly confidential. It cannot be transmitted, reproduced or copied without our written authorisation.

DIGIVEX Power Motion Servoamplifier

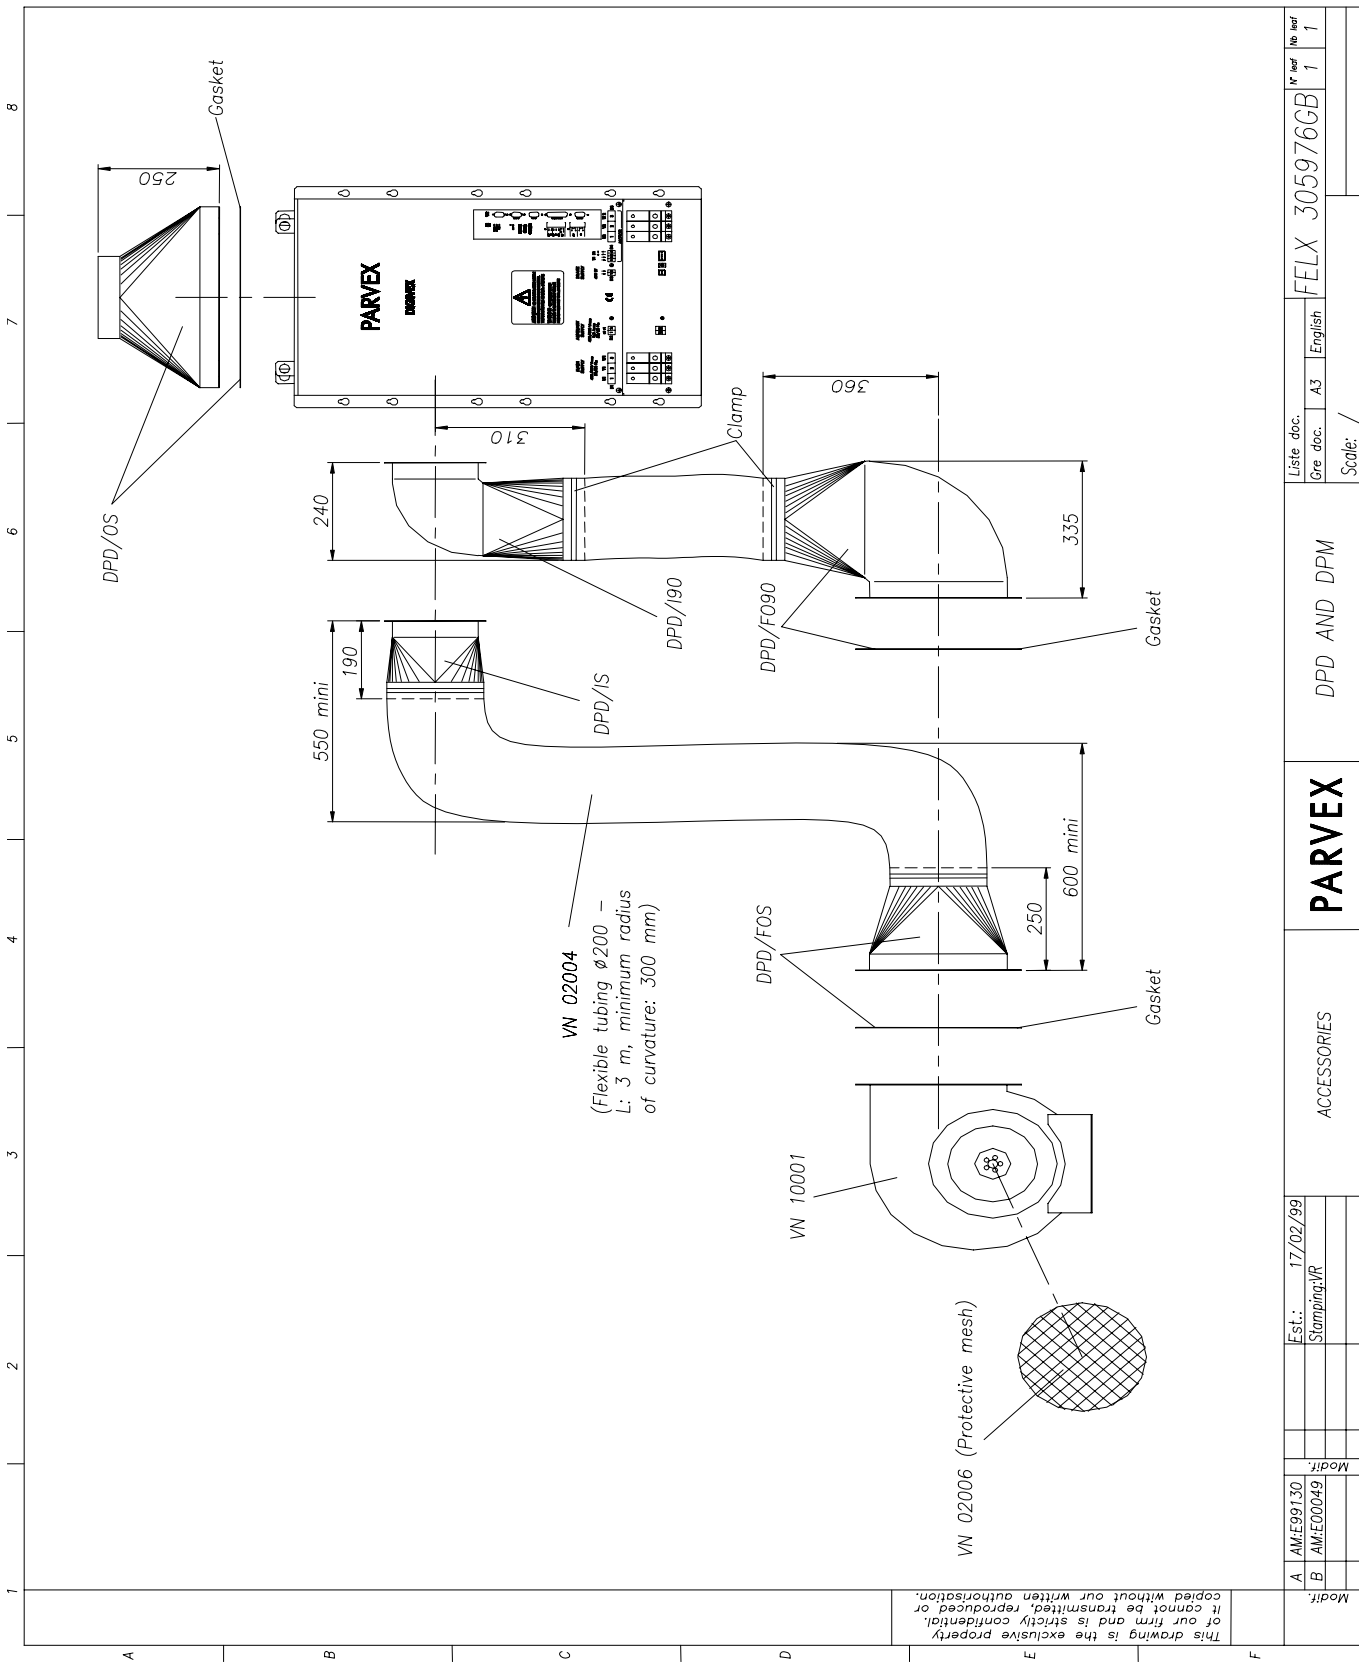

This drawing is the exclusive property of our firm and is strictly confidential. It cannot be transmitted, reproduced or copied without our written authorisation.

Modif:	
A	AM:E99130
B	AM:E00049
Est.:	17/02/99
Stamping/VR	

ACCESSORIES

PARVEX

DPD AND DPM

5. ELECTRICAL CONNECTIONS

5.1 General Wiring Requirements

5.1.1 Appliance handling

See the safety instructions given at the beginning of this manual. In particular, wait for all the front panel LEDs to go off completely before doing any work on the servo-amplifier or servomotor.

5.1.2 Electromagnetic compatibility

EARTHING

- Comply with all local safety regulations concerning earthing.
- Utilize a metal surface as an earth reference plane (e.g. cabinet wall or assembly grid). This conducting surface is termed the potential reference plate. All the equipment of an electrical drive system is connected up to this potential reference plate by a low impedance (or short distance) link. Ensure the connections provide good electrical conduction by scraping off any surface paint and using fan washers. The drive will then be earthed via a low impedance link between the potential reference plate and the earth screw at the back of the DPM. If this link exceeds 30 cm, a flat braid should be used instead of a conventional lead.

CONNECTIONS

- Do not run low-level cables (resolver, inputs/outputs, NC or PC links) alongside what are termed power cables (power supply or motor). Do not run the power supply cable and the motor cables alongside one another otherwise mains filter attenuation will be lost. These cables should be spaced at least 10 cm apart and should never cross, or only at right-angles.
- Except for the resolver signals, all low-level signals will be shielded with the shielding connected at both ends. At the DPM end, the shielding is made continuous by the Sub-D connector mechanism.
- The motor cables are limited to the minimum functional length. The yellow and green motor cable lead must be connected to the box or front panel terminal block with the shortest possible link.
- This usually means shielded motor cable is not required. Chokes may also be inserted into the motor phase leads.

DIGIVEX Power Motion Servoamplifier

MAINS FILTERING

The equipment complies with standard EN55011 with a filter on the power input with minimum 60dB attenuation in the 150 kHz - 30 MHz range.

The network filter must be fitted to the ground reference plane (TRP) at the mains end, ahead of the KM contactor and as close as possible to the DIGIVEX Power Motion.

A shielded power cable or a cable in a metal jacket must be used between the DIGIVEX Power Motion and the KM contactor as well as between the KM contactor and the filter.

Avoid running cables together ahead of and after the filter.

Do not connect other appliances in parallel with the DIGIVEX after the KM.

The filtre+drive+motor unit sometimes has high leakage currents which can give rise to the tripping of the ground fault circuit breaker. The ground fault circuit protection must have a minimum threshold of 300mA. We recommend the use of delayed ground fault circuit breakers.


OTHER MEASURES

Self-inducting components must be protected against interference: brakes, contactor or relay coils, fans, electro-magnets, etc.

5.1.3 DIGIVEX Power Motion Sub-D connectors

In order to ensure the system is free from disturbances, it is essential for the rack to be properly connected to the earth plane of the electrical cabinet and for the covers of the Sub-D connectors to be EMI/RFI shielded (metal with shielding braid connection).

Make sure the Sub-D connectors and their covers are properly connected (lock screws fully tight).

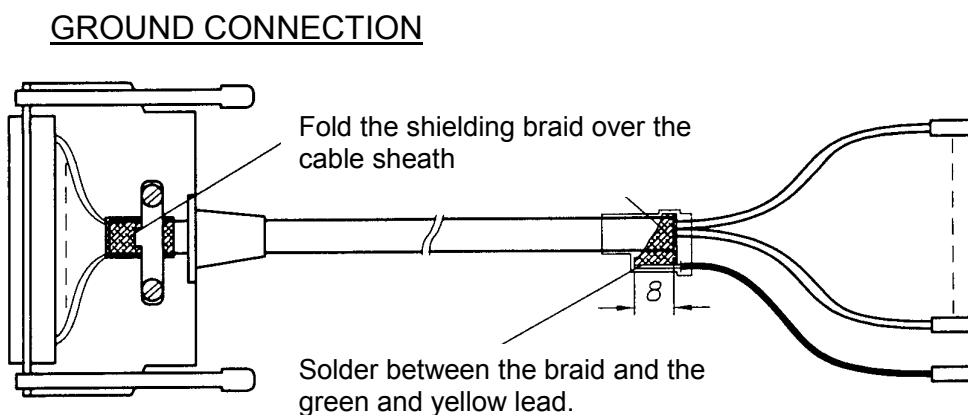


5.2 Typical Connection Diagram

See drawing FELX306785, FELX306126 and 306128.

It is mandatory to connect the auxiliary power supply to check the condition of the variable speed control before power is applied.

The automatic control diagram must be complied with in full.

DIGIVEX Power Motion Servoamplifier

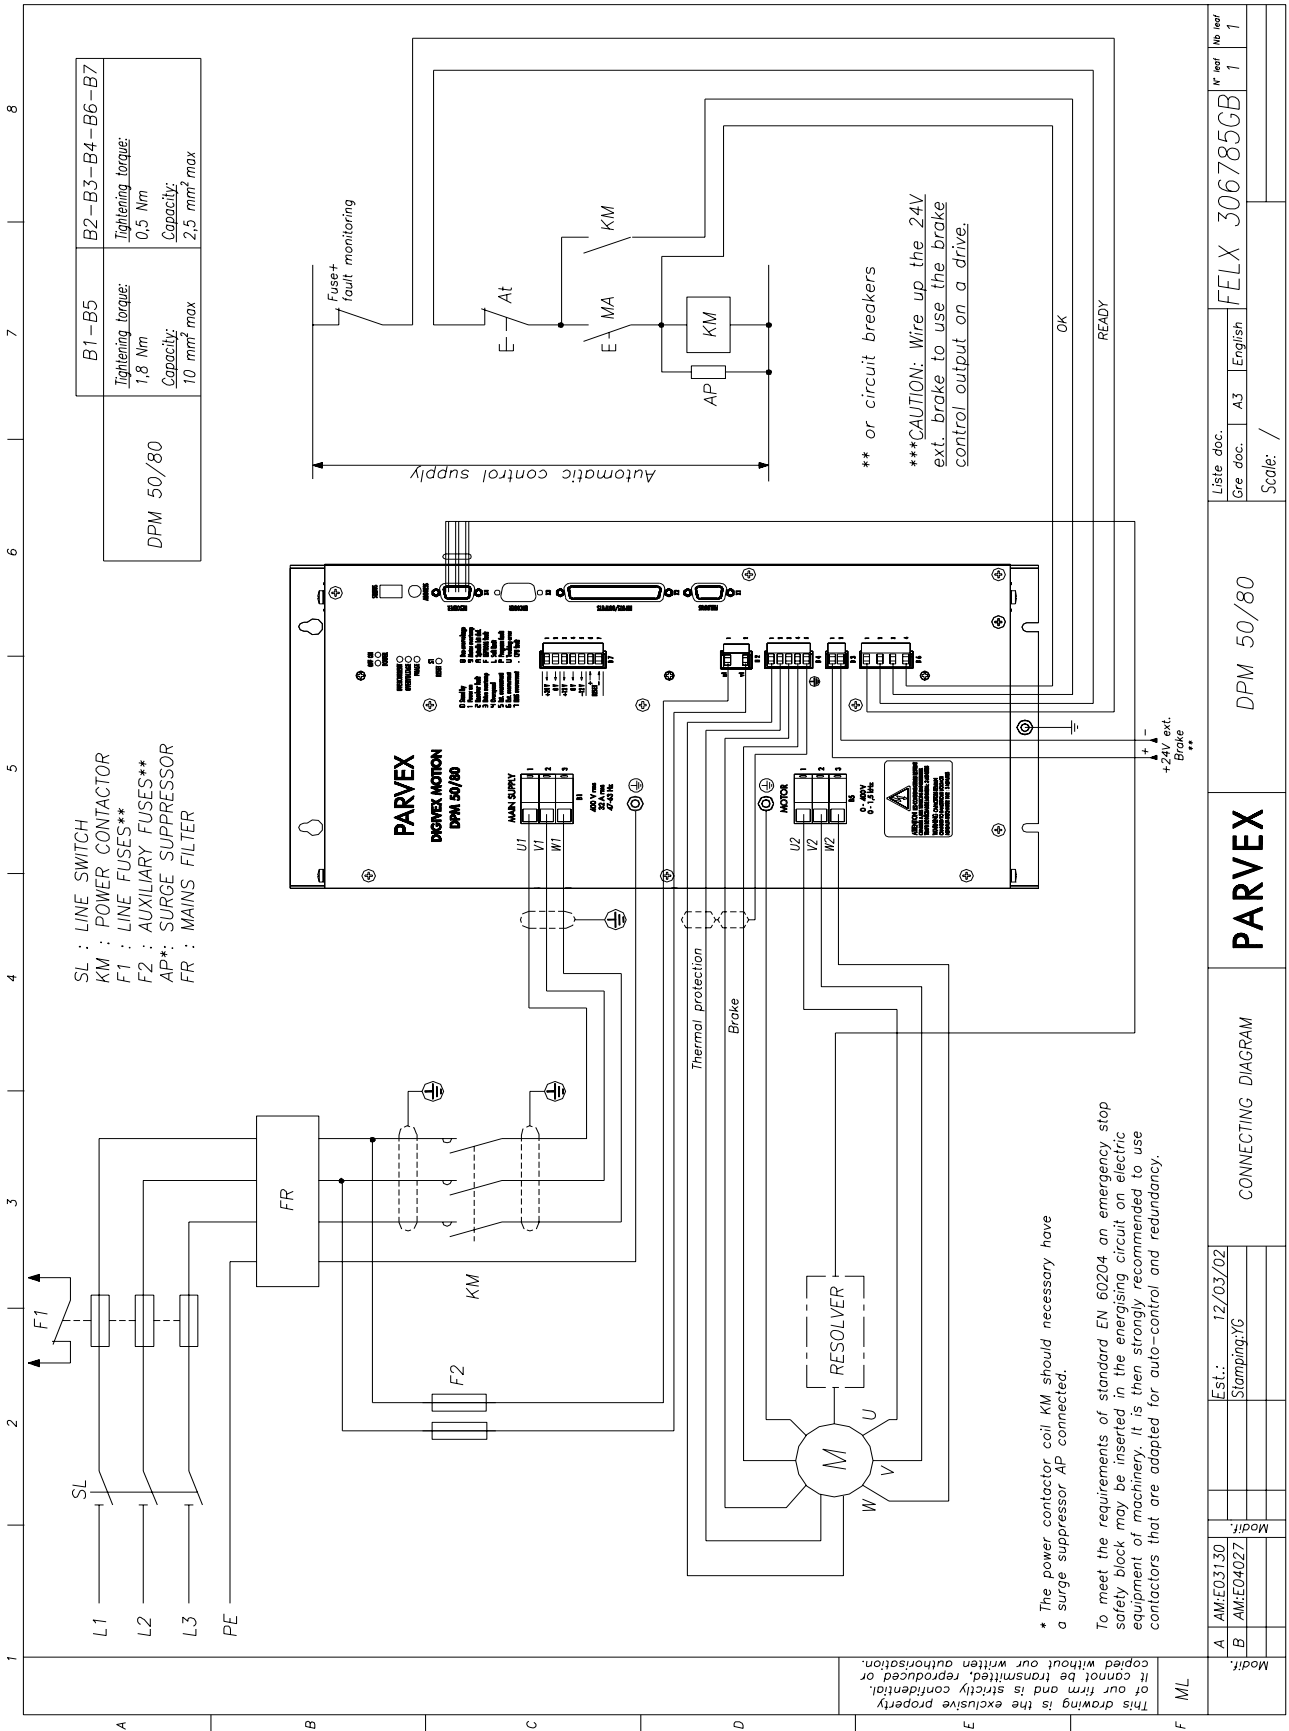

DIGIVEX Power Motion Servoamplifier

5.2.1 Surge Suppressor

- KM: Power Contactor
- AP: Surge Suppressor

The power contactor coil KM should **necessary** have a surge suppressor AP connected in order not to destroy prematurely the internal relay contact of the drive. This module should be use whether the power contactor supply is AC or DC.

The relay manufacturers (Telemecanique: LC1 series, ABB: B series,...) provide surge suppressors fitted relays wether the power contactor supply is AC or DC for various voltages (RC module, Diode+Zener Diode, Varistor,...).

DIGIVEX Power Motion Servoamplifier

5.3 Power component dimensioning

The installed power is :

$$P \approx 1.1 U_{rms} \times I_0 \text{ motor}$$

where I_0 = permanent current at low speed

	Maximum I_0	Recommended fuses		Input filter
DPM 50/80	50 A	gG 32	AJT 40 (*)	FR 03636
DPM 100/120	100 A	gG 63		FR 03064
DPM 150/150	150 A	gG 100		FR 03100
DPM 200	200 A	gG 125		FR 03200
DPM 300	300A	gG 200		FR 03200

May be replaced by circuit breakers.

(*): UL and c UL compliance required: UL fuse 40A/600V JDDZ

5.4 MAIN SUPPLY Connection (Terminal block B1)

MARKING	TERMINAL	FRONT PANEL	FUNCTION	TERMINAL BLOCK TYPE	TERMINAL CAPACITY
B1/1	U1	MAINS SUPPLY	Connection To Mains	fixed, screw-type	DPM 50 max 10 mm ² flexible max 16 mm ² rigid DPM 100 max 25 mm ² flexible max 35 mm ² rigid DPM 150 and DPM 200 max 50 mm ² flexible max 50 mm ² rigid DPM 300 35 mm ² rigide 95 mm ² maxi
B1/2	V1				
B1/3	W1				

DIGIVEX Power Motion Servoamplifier

5.5 Auxiliary supply Connection (Terminal block B2)

The supply required for regulations ($\pm 15V, \pm 12V$ for DPM 50/80, 5V, 24V, fans (not for 200A and 300A) are taken internally from the D.C direct voltage (rated 550V) which may be obtained :

- either via a single-phase supply from the mains, between two phase wires ahead of the main contactor (terminal block B2 input);
- or from an independent single-phase supply (230V or 400V/480V), connected to terminal block B2. In this case, **the supply must be isolated from the mains by a transformer** (secondary 230V or 400V/480V $\pm 10\%$ 100VA for DPM 50/80 to DPM 150 and 200 VA for DPM 200 and DPM 300).

UL and c UL compliance required: AM2A or ATDR2A fuses (Class CC UL fuses) are necessary to protect the auxiliary input.

MARKING	TERMINAL	FRONT PANEL	FUNCTION	TERMINAL BLOCK TYPE	TERMINAL CAPACITY
B2/1 B2/2	u1 v1	AUXILIARY SUPPLY	Low Level Supply	fixed, screw-type	min 0,2 mm ² max 4 mm ² flexible wire max 6 mm ² rigid wire

5.6 Brake Supply Connection (Terminal block B3)

A 24V supply may be fed into this terminal block for the brake fitted to the motor. It is fed to the motor terminal block B4.

Regulated/filtered 24V $\pm 10\%$. Protection against overvoltage by 26 Joule varistor. This protection is operational from 30V.


UL and c UL compliance required: 2A fuse (UL recommended) on the +24VDC voltage.

WARNING: Do not use the 24V on terminal block B7 for this function.

MARKING	TERMINAL	FRONT PANEL	FUNCTION	TERMINAL BLOCK TYPE	TERMINAL CAPACITY
B3/1 B3/2	+24V 0V	BRAKE SUPPLY	24V input for brake	unpluggable, screw-type	min 0,2 mm ² max 2,5 mm ² flexible wire and rigid

DIGIVEX Power Motion Servoamplifier

5.7 Earth connection



Chassis earth:

To comply with UL 508 C, the earth wire cross-section should be at least 10AWG (6mm²)

To comply with existing standards, the copper earth wire cross-section should be identical to that of the mains connection up to 16 mm².

For "mains" cross-sections between 16 mm² and 35 mm², the minimum cross-section for the ground conductor is 16 mm².

For "mains" cross-sections greater than 35 mm², the cross-section of the ground conductor should be at least equivalent to half the cross-section of the mains conductor.

5.8 Short-circuit capability

UL and c UL compliance required: the DPM50/80 should be used with power circuits with a maximum capability of current equal to 5000Arms symmetrical (UL 508 C)

5.9 Motor end connection

5.9.1 Terminal block B4 and B5

MARKING	TERMINAL	FRONT PANEL	FUNCTION	TERMINAL BLOCK TYPE	TERMINAL CAPACITY
B4/1 B4/2	TH TH	TH	Motor thermal protector	unpluggable, screw-type	min 0,2 mm ² max 2,5 mm ² flexible wire and rigid
B4/3 B4/4	+ -	BR	Motor brake control		
B5/1 B5/2 B5/3	U1 V2 W2	MOTOR	Connection to Motor	Fixed screw-type	DPM 50/80 max 10 mm ² flexible max 16 mm ² rigid DPM100A max 25 mm ² flexible max 35 mm ² rigid DPM 150 and DPM 200 max 50 mm ² flexible max 50 mm ² rigid DPM 300 35 mm ² rigide 95 mm ² maxi

DIGIVEX Power Motion Servoamplifier

5.9.2 Motor Power connection


UL and c UL compliance required: Only use cables with copper core
There are two possibilities for connection:

- Terminal block + resolver connector.
- Power connector + resolver connector.


5.9.3 Terminal block connection

For the terminal block, the clamping nuts and washer come in a bag
Take care when fitting the lugs not to loosen the connecting leads between the motor and the terminal block.

The power connection lugs are to be inserted between the striated washer and the flat washer.

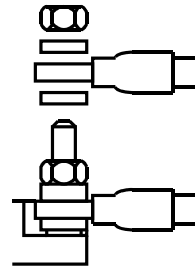

Motor direction of rotation: by wiring as recommended, a positive set point applied to the drive entails clockwise rotation (viewed from the power shaft end).

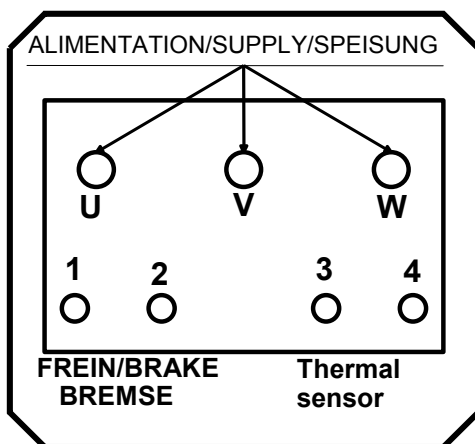

U Phase U

V Phase V

W Phase W

1 Optional brake +24 V

cable $\geq 1\text{mm}^2$

2 Optional brake 0 V

3 Thermal sensor


cable $\geq 1\text{mm}^2$

4 Thermal sensor

DIGIVEX Power Motion Servoamplifier

5.9.4 Power connector connection

Power can be connected using a connector as an option. The removable part of the connector (plug) can be supplied on request.

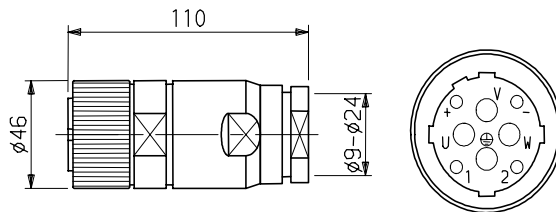

PLUG 220065R3610

PERMISSIBLE CABLE CROSS-SECTION FOR PLUGS


PLUG 220065R3610: Power & Ground: 6 - 16 mm². Brake & thermal protection: 1 - 2.5 mm².

FUNCTION	PIN OUT 220065R3610	CABLE COLOUR
BRAKE +	+	Green/Red
BRAKE -	-	Green/Blue
THERMAL PROT.	1	Orange
THERMAL PROT.	2	Yellow
GROUND	⊕	Green/Yellow -
U ₂	U	Black
V ₂	V	White
W ₂	W	Red
Shielding to be connected to the earth at the servoamplifier end ⊕		Green/Orange

DIGIVEX Power Motion Servoamplifier

5.9.5 "POWER" Cable Definition

The power/drive connector cables must have as a minimum requirement :

- Three insulated conductors connected to U2, V2, W2 phases. Cross-sections as in the table below. The internal chokes of the DIGIVEX Power Motion allow, as a general rule, there is no need to use shielding on the three power conductors.
- one ground conductor (green/yellow).
- one shielded twisted pair for connection of the motor thermal protection. Cross-section of about 1 mm².
- one shielded twisted pair for connection of the holding brake (if fitted). Cross-section of about 1 mm².
- 1 " shielding continuity " conductor (green/orange) to be connected to the servoamplifier earth 

Power cable cross-section

Cable cross-sections shown in the table below make allowance for :

- rated drive current;
- motor/drive distance, service voltage loss = RI.
- ambient temperature, cable Joule losses = RI².
- standardised increase of cable cross-sections.

Depending on distance, following cable cross-section should be used (ambient < 40°C).

Distance →	0m	100m	200m
DIGIVEX Rating	Cable cross-section in mm ²		
DPM 50/80	10		16/25*
DPM 100/120	25		25/50**
DPM 150	50		50/70**
DPM 200		50 ***	
DPM 300		95 ***	

* In the case of a 230V three-phase power supply, cross-section not compatible with the power terminal blocks, provide an intermediate terminal block.

** In the case of a 230V three-phase power supply.

*** For an ambient temperature of 30°C

DIGIVEX Power Motion Servoamplifier

Power cable list, power plugs and equiped cables for H series motors.

MOTOR	Cable cross-section (mm ²)	Power Cables	Power Plugs (1)	Equiped cables
		6537P0012		
NX860 HD-HX-HV800	6	6537P0011	-	-
HS900 HD-HV900	10	6537P0012	220065R3610	220049R46..
HXA-HVA every HW	16	6537P0013	220065R3610	220049R47..
HD-HV1000	25	6537P0014		


Length 05m/10m/15m/25m/50m. Add the cable length to the equiped cable reference.

(1) Option for H motors

5.9.6 Guidelines for long cables between the motor and drive

For the DPM 50/80, DPM 100/120 and DPM 150, provide inductors for lengths of more than 70m (standard cable) or 50 m (shielded cable) as shown in the table below. These inductors cannot be used with flux weakening motors (spindle motors). The cable length must be less than 70m (standard cable) or 50 m (shielded cable) for these motors.

To be fitted between the DIGIVEX Power Motion (as close as possible to the drive) and the motor. Dimensions

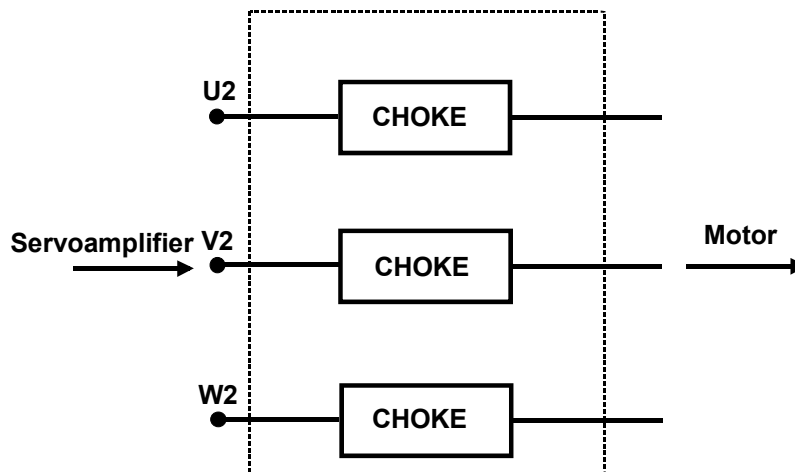

		DPM 50/80	DPM 100/120	DPM 150
Length cable	Standard	70 to 200 m	100 to 200 m	
	Shielded	50 to 135 m	70 to 135 m	
Choke		SF02026 340 µH	SF02026 340 µH	SF02027 190 µH

DIGIVEX Power Motion Servoamplifier

5.9.7 Holding Brake Connection

Brushless motors may be fitted with a brake of suitable dimensions to hold the motor immobilised. If 24 V dc $\pm 10\%$ is applied across the brake terminals, the brake disc is released and the motor can rotate.

The 24 V dc current for brake control must be regulated/filtered. It is to be connected to terminal block B3 and is then distributed internally. The brake is to be connected to terminals B4/3 and B4/4.

5.9.8 Thermal protection Connection

The 2 terminals of the PTC sensor or dry contact, located in the motor terminal box, are to be connected to B4/1 and B4/2.

5.9.9 Motor Ventilation Connection


Some motors can be delivered as fan-cooled versions.

Fan characteristics :

- Supply voltage : 400V or 480V three-phase, 50/60 Hz as standard.
- Power consumption : 45 W
- Connector type connection (plug 220056P0200 supplied on request).

When connecting check the direction of fan rotation and check that airflow is produced. The direction of airflow is shown on the dimension drawings.

Removable connector plug

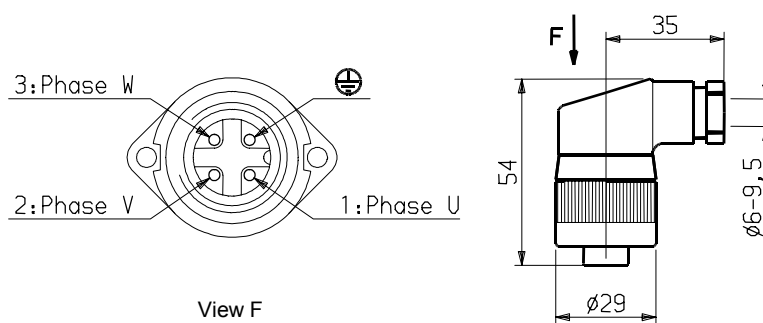

DIGIVEX Power Motion Servoamplifier

5.10 Automatic control Input / Output connection

5.10.1 Terminal block B6 and B7

MARKING	TERMINAL	FRONT PANEL	FUNCTION	TERMINAL BLOCK TYPE	TERMINAL CAPACITY
B6/1	1	READY	Drive ready for connection to mains	unpluggable, screw-type	min 0,2 mm ² max 2,5 mm ² flexible wire and rigid
B6/2	2		regulation and power OK		
B6/3	3	OK		unpluggable, screw-type	
B6/4	4				
B7/1	+24V		24V « user » output	unpluggable, screw-type	min 2 mm ² max 2,5 mm ² flexible wire and rigid
B7/2	0V				
B7/3	+15V*		+/-15V* « user » output		
B7/4	0V				
B7/5	-15V*			RESET	
B7/6	+		logic input		
B7/7	-				

*+/-12V for DPM 50/80

- **B7/1** **24 V regulated**
- **B7/2** **0 V of 24 V**

- Max. 24 V - 50 mA power supply. **Do not use for brake supply.**
- Protection against overloads and short circuits by current limitation.

This supply is for logic inputs but is also used internally for the fan power supply. There is no common point with the metal case.

- **B7/3** **+15V regulated (+12V regulated for DPM 50/80)**
- **B7/4** **0V of 15V (0V of 12V regulated for DPM 50/80)**
- **B7/5** **-15V regulated (-12V regulated for DPM 50/80)**

- Maximum power supply +/-15V - 10mA (maximum of +/-12V - 100mA for DPM 50/80)
- Protected by 47 ohms resistor (DPM 50/80 protected by regulator)

This supply is common with the internal supply of the POWER SUPPLY module. There is no common point with the metal casing.

- **B7/6 Reset +** **(24V DC logic input)**
- **B7/7 Reset-** **(0V)**

A 24 V rising edge applied across B7/6 compared with B7/7 resets the system after a power supply or drive fault.

Note that the front panel reset button can also be used, or turning off the power completely (power and auxiliaries).

This control has no effect during normal operation.

The system must be "reset" after any active fault.

See the PME-DIGIVEX Motion setting and adjustment manual for further details.

DIGIVEX Power Motion Servoamplifier

5.10.2 main contactor control

- B6/1 - B6/2 : READY contact

Cut-out power : max voltage 250 Vac, max 1A.

This contact is closed if :

- the D.C voltage is correct (>200V dc),
- the drive has not indicated any "regulation" type fault (no resolver, incorrect low level auxiliary supply, fault not erased by "reset").

This contact allows test closure of the main contactor. The "POWER OFF" LED lights. It is mandatory to wire the ready contact into the power supply automatic control line of the main contactor.

- B6/3 - B6/4 : OK Contact

Cut-out power : max voltage 250 Vac, max 1A.

The contact is closed if :

- power supply is present (>200 V dc)
- the servoamplifier, auxiliary and power, indicates no faults

The contact allows the main contactor to be self-maintained

- the green POWER ON LED lights.

Main contactor management

Closure of the "READY" relay (if the external safety devices are correct) authorises closure of the main contactor, if the ON push button is activated. The OK relay button ensures the main contactor self-holds for 30 ms after the ON command.

Conversely, opening of the "OK" relay causes the main contactor to open. The "OK" relay opens in the following circumstances :

- No phase
- Recovery fault
- Maximum power bus voltage
- Minimum power bus voltage
- Drive fault
- Auxiliary supply fault
- Overcurrent
- Current capacitors charging circuit damaged (current limiting resistor open or internal contactor damaged).

DIGIVEX Power Motion Servoamplifier

5.11 Resolver Connection

5.11.1 Description

The resolver is a high precision sensor (± 10 angular minutes as standard). It must be carefully wired :

- Separately routed power cable.
- Twisted pair cable (sine, cosine, and excitation) with individual shielding of the pairs. The three pairs shielding should be connected to the metal cap of the SUB-D plug. Do not connect the pair shielding at the motor end

PARVEX can supply the cable in either of two versions :


- Separate cable, in this case wire as shown in the diagram below.
- Cable fitted with SUB-D plug at drive end and connector at motor end. This solution is strongly recommended as the cable is ready for use.

Maximum distance between resolver and DIGIVEX Power Motion : 200 m. Please ask about longer cables.

Maximum permissible cross-sections :

- For SUB-D plug : 0.5 mm^2 .
- For removable connector plug. 0.14 to 1 mm^2 (solder or crimp-fit contacts)

RESOLVER REMOVABLE CONNECTOR PLUG (connection at motor end)
220065R4621 (solder contacts - standard)
220065R1621 (crimp-fit contact)

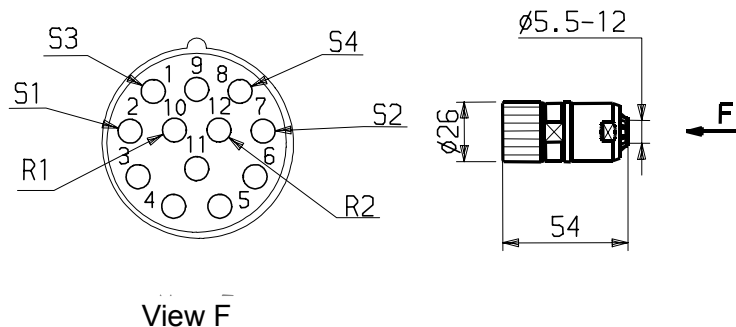

For XD motors

Connection with SUB-D plug on rear cover (cable inserted through special gland).

Please ask for details.

DIGIVEX Power Motion Servoamplifier

5.11.2 Sub-D connector X4:"Resolver"

DIGIVEX end connections, Sub-D 9 pin connector item ref. X4 "RESOLVER".
Maximum conductor cross-section: 0.5 mm²

CONTACT	TYPE	FUNCTION
1	Input	Cosine S1
2	Input	Sine S2
3	Input	Cosine S3
4	Input	Sine S4
5	Output	Excitation R1
6	-	Unused
7	-	Unused
8	-	Unused
9	Output	0V Excite R2/3


5.11.3 Cables

Cables by meter: product number : *6537P0001*

Complete cables (fitted with plug at the motor end and SUB-D connectors at the DPM end):

product number *220049R61xx* (xx : length in metres
5m/10m/15m/25m/50m).

DIGIVEX Power Motion Servoamplifier

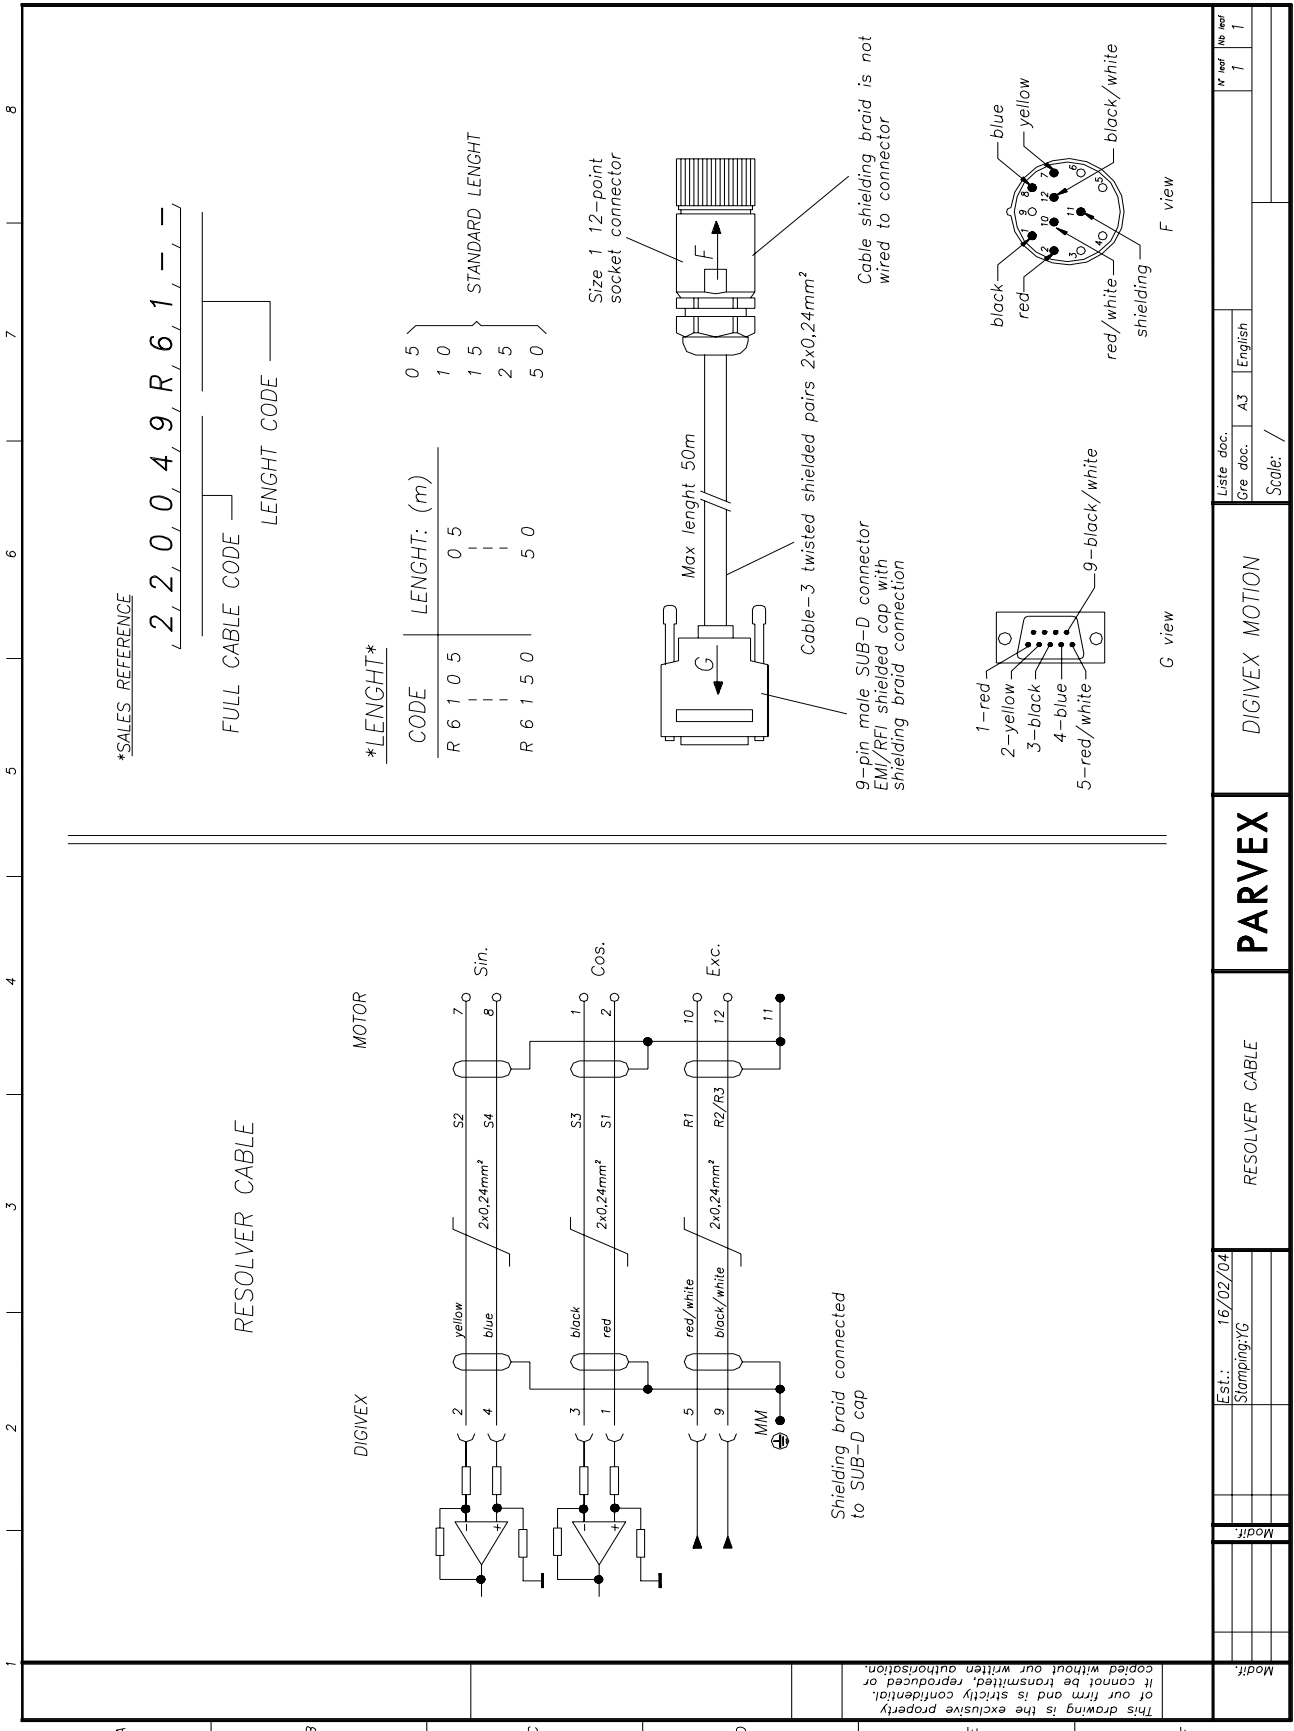


This drawing is the exclusive property of our firm and is strictly confidential. It cannot be transcribed, reproduced or copied without our written authorisation.

5.12 FIELDBUS Connections

5.12.1 SUB-D X1 plug : FIELDBUS

Identify the nameplate on the front end :

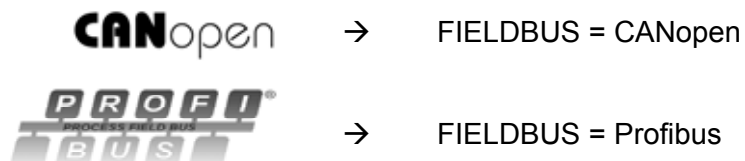

5.12.2 CANopen connections and cables

See DIGIVEX Motion - CANopen manual : PVD 3518

5.12.3 Profibus connections and cables

See DIGIVEX Motion - Profibus manual : PVD 3554

DIGIVEX Power Motion Servoamplifier

5.13 Input/Output connection

5.13.1 SUB-D X2 socket: Inputs/Outputs

CONTACT	TYPE	FUNCTION	CHARACTERISTICS
1 2 20	0 V -12 V +12 V	Symmetrical supply available for analogue I/O	Max. current available = ± 50 mA
3 21	outa 0 V	± 10 V analogue output	Analogue conversion: ≈ 9 bits + sign Output ± 10 V / 3 mA Protected against short circuits
4 22	ina + ina -	± 10 V analogue input	Analogue conversion: 13 bits + sign Differential input
28 10	+ 24V 0V (1)	+24 V input for logic output supply 0V logic outputs	max. 400 mA for 8 outputs Internally connected to X2-7 and X2-23
9 27 8 26 7	out 0 out 1 out 2 out 3 0V (1)	Logic outputs Logic outputs Logic outputs Logic outputs 0V logic outputs	24 V PNP, optocoupled, max. 50 mA outputs, protected against short circuits Internally connected to X2-10 and X2-23
25 6 24 5 23	out 4 out 5 out 6 out 7 0V (1)	Logic outputs Logic outputs Logic outputs Logic outputs 0V logic outputs	24 V PNP, optocoupled, max. 50 mA outputs, protected against short circuits Internally connected to X2-7 and X2-10
37 18 36 17 35 16 34 15 19	in0 in1 in2 in3 in4 in5 in6 in7 COM0	Logic input Logic input Logic input Logic input Logic input Logic input Logic input Logic input Common for inputs in0-in7	Optocoupled logic inputs, type 1 under IEC 1131-2
33 14 32 13 31 12 30 11 29	in8 in9 in10 in11 in12 in13 in14 in15 COM1	Logic input Logic input Logic input Logic input Logic input Logic input Logic input Logic input Common for inputs in8-in15	Optocoupled logic inputs, type 1 under IEC 1131-2

DIGIVEX Power Motion Servoamplifier

5.13.2 Input/Output characteristics


5.13.2.1 Logic outputs (out0 - out7)

- opto-mos outputs (2.5 kV isolation voltage), 24 V dc / 50 mA,
- PNP-type static outputs (load connected to negative supply pole) with diode in parallel on load and protection by current limitation,
- an output is said to be at 1 if it is activated (24 V dc output),
- user must provide 24 V dc supply for outputs (18 V ac rectified, filtered),
- 24 V dc supply input protected against reversals of polarity (diode).




To avoid any ill-timed output status change during drive initialization (when the auxiliary power supply appears), it is recommended to wait about 3 seconds before switching on the 24V DC supply of the outputs.

	MIN	TYPICAL	MAX
Supply voltage	5 V	24 V	40 V
Output current (level 1)	0.05 mA	-	50 mA
Residual current (level 0)	-	-	0.001 mA
Response time T_{on} (0-1)	-	0.3 ms	1 ms
Response time T_{off} (1-0)	-	0.2 ms	1 ms
Output voltage drop I = 50 mA	-	-	2 V

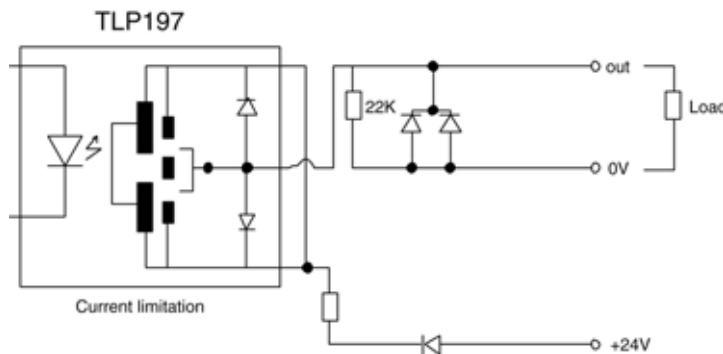

5.13.2.2 Analogue output (outa)

Analogue output	:	+/-10V
Resolution	:	≈ 10 bits (9 bits + 1 sign bit)
Maximum output current	:	5 mA (minimum load 2 K)
Source impedance	:	100 ohms

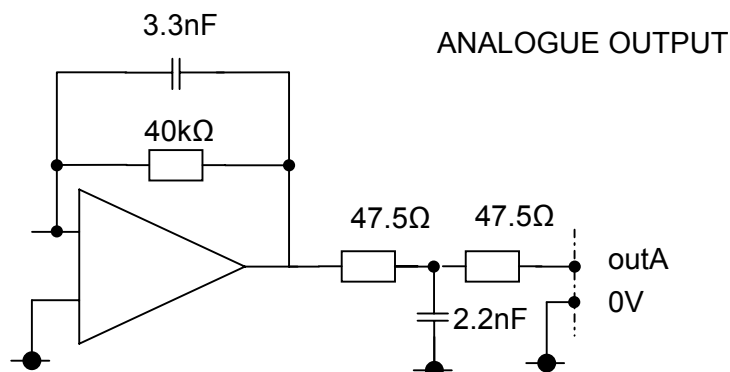


DIGIVEX Power Motion Servoamplifier

5.13.2.3 Logic inputs (in0 - in 15)

- opto-coupled 24V dc inputs (5 kV isolation voltage),
- type 1 inputs under IEC 1131-2,
- input load resistance: 10 K,
- an input is said to be at 1 if it is activated (24 V dc output). Otherwise it is said to be at 0,
- inputs may be connected directly to PNP type outputs (no external load resistor required),
- possibility of connecting 24 V dc "NC (normally closed) or NO (normally open) inductive proximity detectors : 3-lead, PNP output type (load connected to negative supply pole).


	MIN	TYPICAL	MAX
Input voltage (level 0)	-	0 V	5 V
Input voltage (level 1)	15 V	24 V	30 V
Input current (level 0)	-	0 mA	0.5 mA
Input current (level 1)	3 mA	7 mA	10 mA
Response time T_{on} (0-1) Inputs In0-In3	-	0.2 ms	-
Other inputs (in4-in15)	-	1 ms	-
Response time T_{off} (1-0) Inputs In0-In3	-	0.2 ms	-
Other inputs (in4-in15)	-	1 ms	-

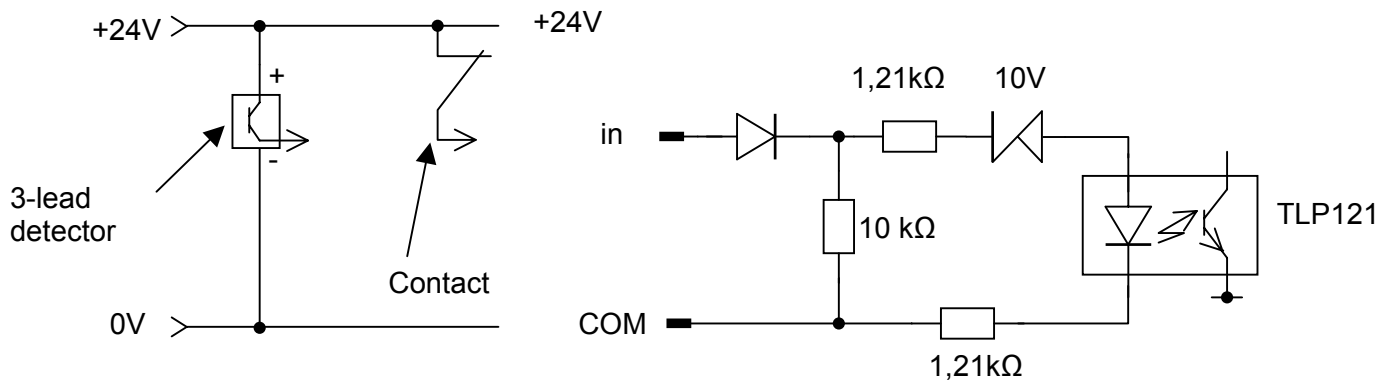

DIGIVEX Power Motion Servoamplifier

5.13.2.4 Analogue input (ina)

- Differential input : +/-10V
- Resolution : 14 bits (13 bits + 1 sign bit)
- Input impedance : >40k Ω
- Maximum consumption on +12 V : 10 mA max.
- Maximum consumption on -12 V : 10 mA max.

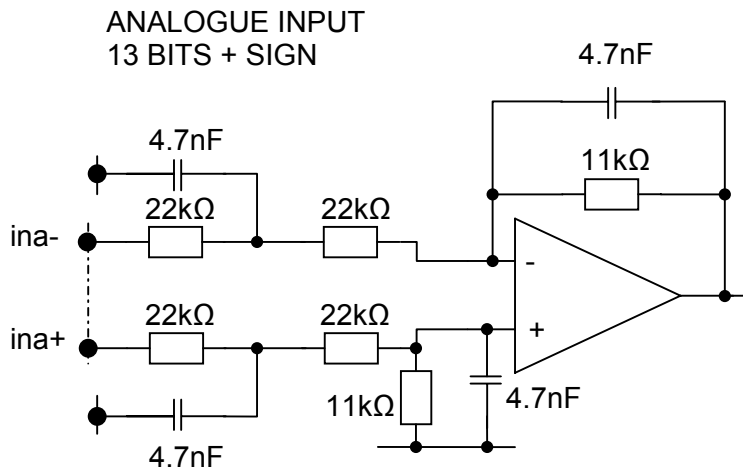


5.13.3 Cable

Bare cables: product number : CB 08304

Complete cables product number : CYB04559R1 xx (xx : defines the length in m) (equipped with SUB-D connectors). See drawing FELX 305974.

Product number of cable supplied by meter by Parvex: product number CB08307

DIGIVEX Power Motion Servoamplifier

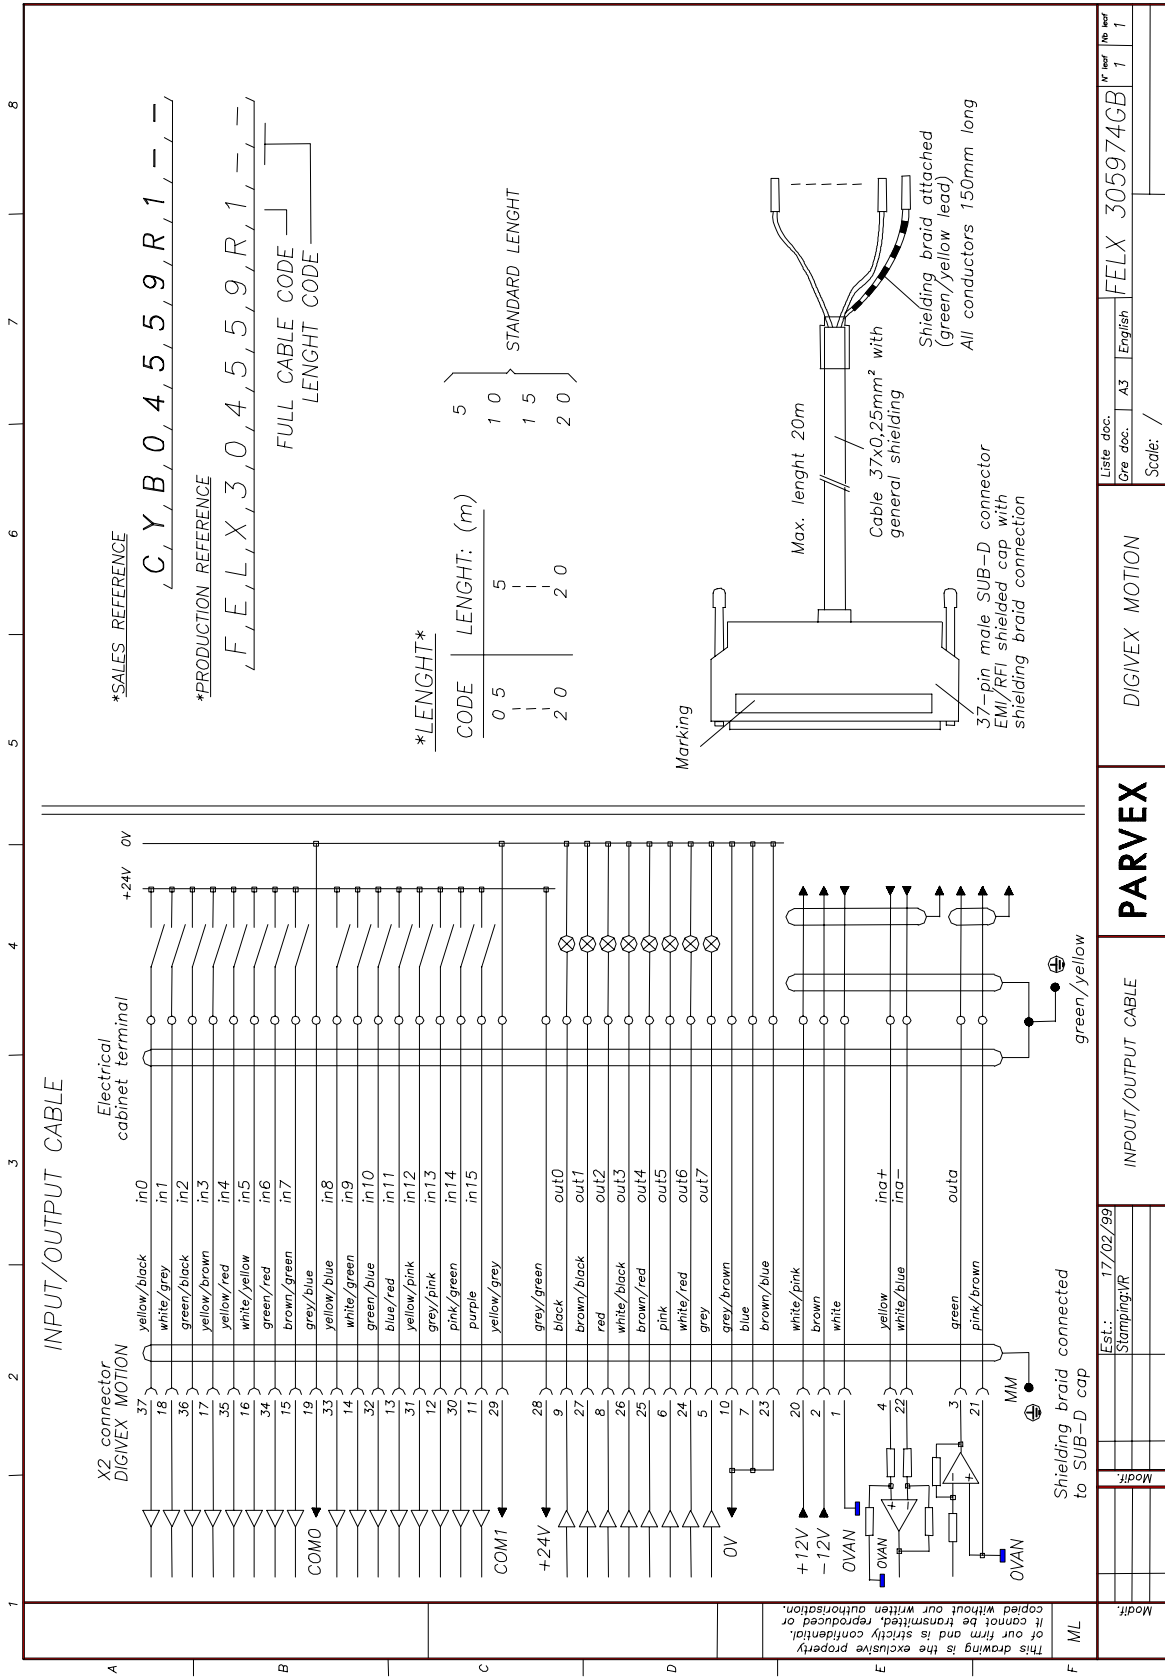

Gré. doc.:	A3	English	FELX 305974GB	N° ref:	1
Liste doc.:				N° ref:	1
Scale: /			DIGIVEX MOTION		
PARVEX			INPOUT/OUTPUT CABLE		

DIGIVEX Power Motion Servoamplifier

5.14 Encoder emulation option connection (SC6639)

5.14.1 Description

This optional board, fitted in the DPM, converts the signal from the resolver into a series of pulses identical to those from an incremental encoder: A, B, Zero Mark and their complements.

5.14.2 Sub-D connector X3: encoder emulation option

Sub-D 9-pin plug, "Encoder". Maximum conductor cross-section: 0.5 mm².

CONTACT	TYPE	FUNCTION	Characteristics
5	Input	5V	Max. current = 100 mA
9	Input	0V	
7	Output	A	Encoder channel A
3	Output	\bar{A}	Encoder channel \bar{A}
8	Output	B	Encoder channel B
4	Output	\bar{B}	Encoder channel \bar{B}
6	Output	zero mark	Encoder channel zero mark
2	Output	$\overline{\text{zero mark}}$	Encoder channel $\overline{\text{zero mark}}$

DIGIVEX Power Motion Servoamplifier

5.14.3 Programming resolution and zero mark position

This is done with the PME DIGIVEX-Motion. (See the Manual PVD3516)

These parameters can be called up by selecting the "Input/Output parameters menu with the "options" tab.

Resolution

Adjustable between 1 and 16384, either by +/- keys, or by entering the number directly (in "OFF LINE" mode only).

Zero Mark Setting

Adjust by trial-and-error with the PC working in "ON LINE" mode.

When the operator judges the position is suitable, he confirms by acknowledging the zero mark.

5.14.4 Electrical characteristics

The electrical output interface meets standard RS422 for differential serial links. The circuit used is a "LINE DRIVER" of the 26C31 type. The electrical characteristics are therefore closely related to the use of this component.

Voltage supply

The encoder emulation boards are electrically isolated between the output stage through three optocouplers, needing to be powered by an external +5V $\pm 10\%$, 100 mA source, as for all incremental encoders.

In no case can this power supply, which is intended only for electrical isolation, be used to keep position information from the resolver in the event of failure of the drive's low-level power supply.

Short-circuit capability


A single output may be short-circuited at 0 V at any given time

DIGIVEX Power Motion Servoamplifier

Signal form

Signal levels:

- $U_{high} \geq 2.5V$ for $I_{high} \geq -20mA$
- $U_{low} \leq 0.5V$ for $I_{low} \leq 20mA$

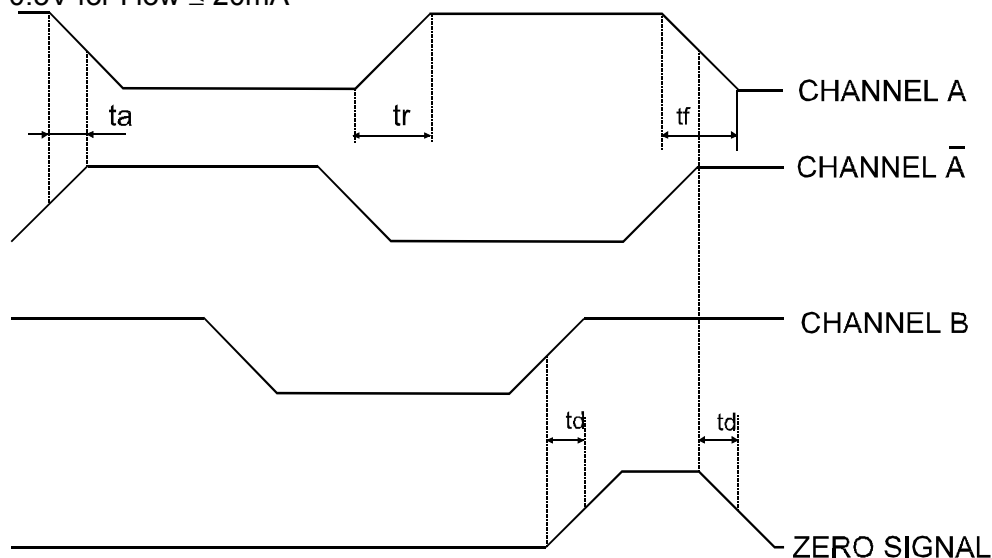

Switching time:

Rise or fall time defined from 10% to 90% of the magnitude in question, without cable and without load.

$$tr = tf = 45ns \text{ (typical value)}$$

Time delay between direct and complemented channels

Time delay defined at 50% of magnitudes in question without cable and without load.

$$-6ns \leq td \leq 6ns \text{ (maximum)}$$


maximum frequency : 500 kHz on signals A or B

DIGIVEX Power Motion Servoamplifier

Time interval between channels A, B and the zero mark

Time delay defined at 50% of magnitudes in question without cable and without load.

$$-6\text{ns} \leq t_d \leq 6\text{ns} \text{ (maximum)}$$

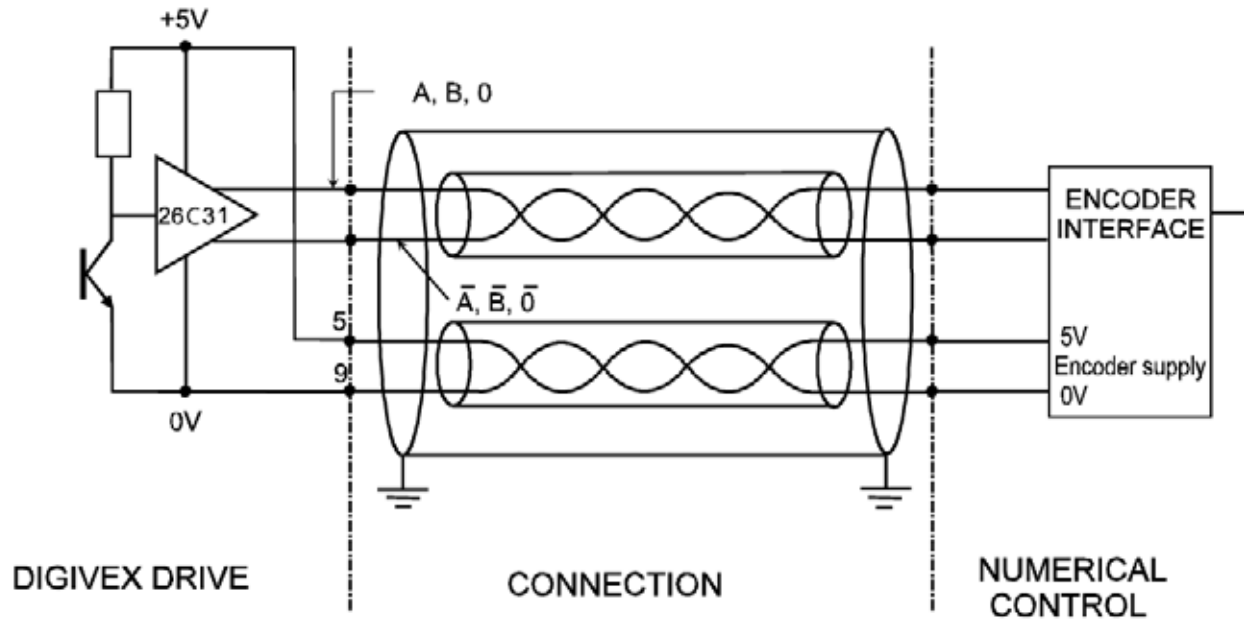


5.14.5 Cable

Cable can be supplied with SUB-D connectors, see drawing FELX 304554.

Product number DIG 04546R1xx (2 SUB-D connector)
 DIG 04546R2xx (1 SUB-D connector)
 (xx : defines length in meters)

DIGIVEX Power Motion Servoamplifier

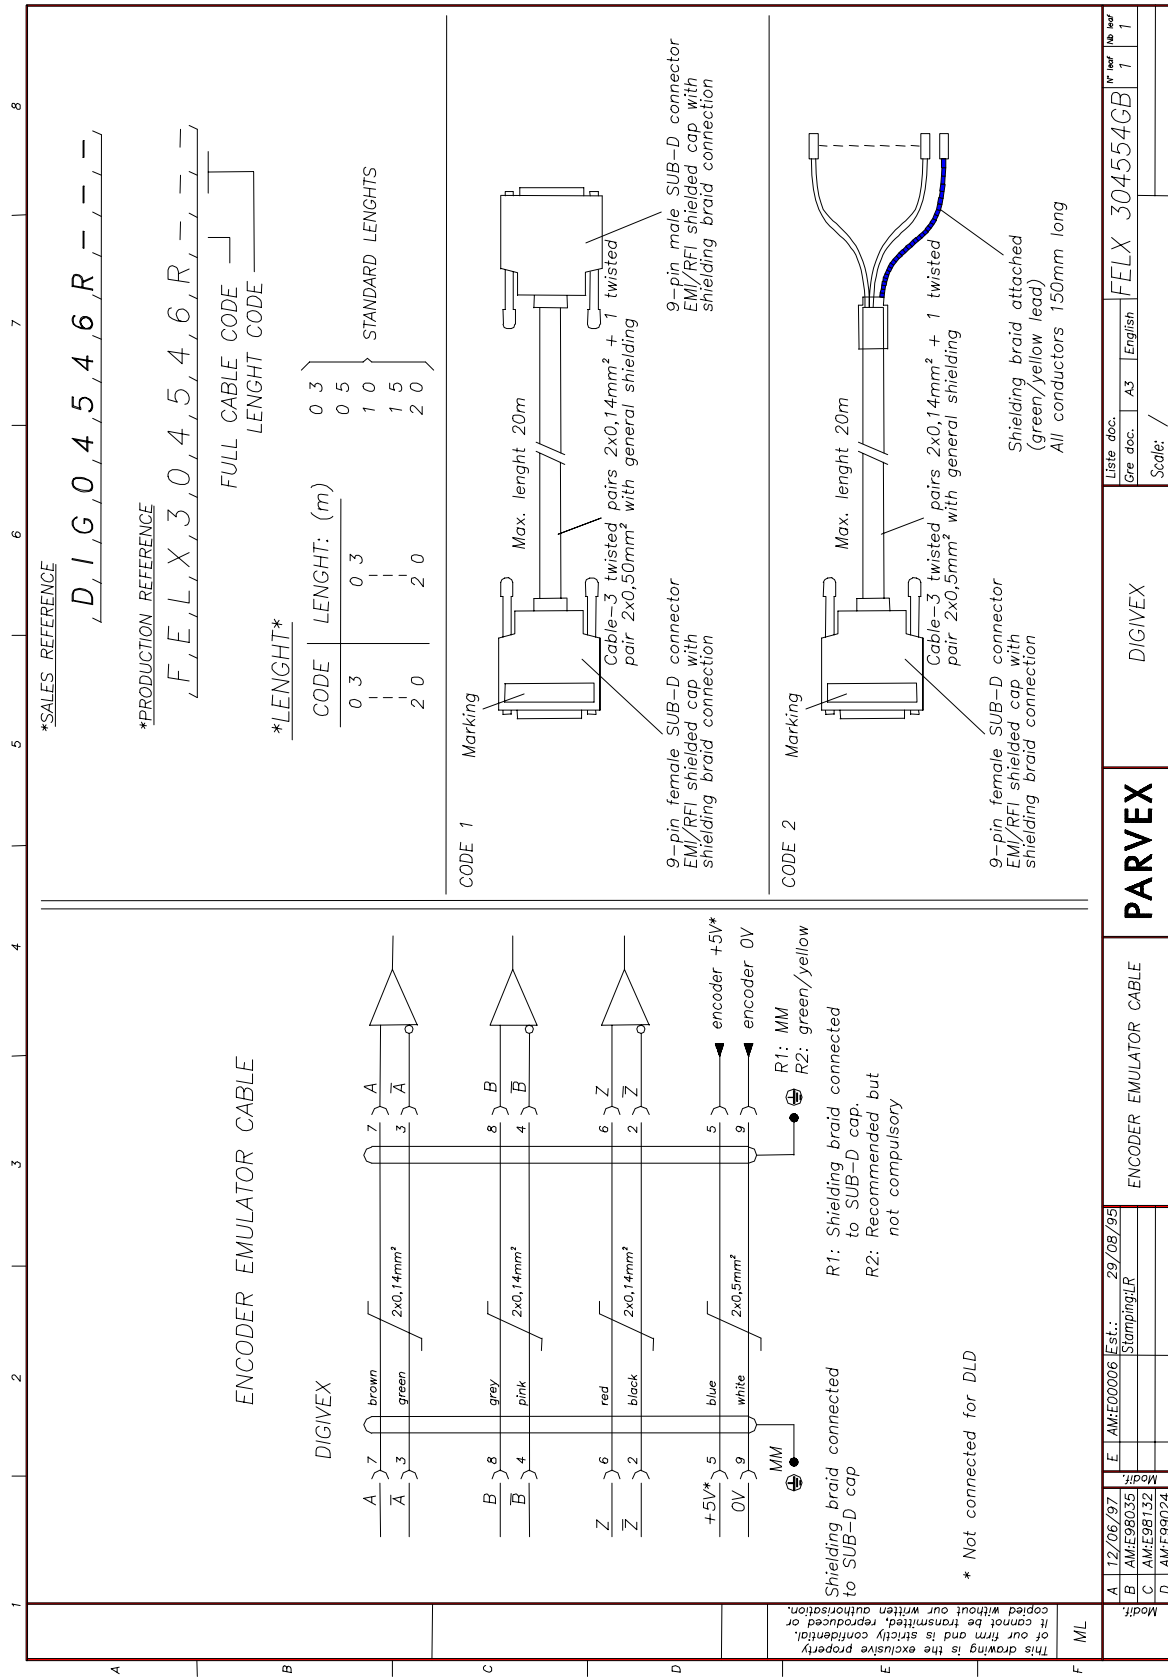

5.15 External encoder input option connection (SC6638)

5.15.1 Description

This option board, placed in the DPM, is used to connect an external incremental encoder which may be used:

- either as a master axis for synchronization with an external moving component, or as a cam type function
- or as a position measuring device if position measurement given by the resolver is unsuitable, Caution: in this case, the resolver must be connected nevertheless.
- or as a position measuring device for refined applications where allowance must be made for position on the part and not on the motor, Caution: in this case, the resolver must be connected nevertheless.

- or as an automatic control and a position measuring device
Caution: in this case, the motor shaft must be mechanically free so that the motor can be polarized using user program as Motor_polarization.bdm which is to be found under :
C:\Program Files\Parvex\Pme4.xx\App_Parvex\Samples\Misc.

The drive in7 input and out7 output are assigned to this program :

- in7 = 1 authorizes the polarization phase to start.
- out7 = 1 when the polarization phase is completed.

This program is only given as an example and can be modified according to the customer application.


The position sensor must be an incremental encoder type, with complemented track, with a line driver:

- tracks A, \bar{A} , B, \bar{B} , zero mark, $\overline{\text{zero mark}}$
- supply +5 V
- maximum consumption 250 mA
- maximum frequency: 250 kHz on signals A or B
- Encoder +5V supply voltage is provided by the DPM from a +24V DC external supply.


DIGIVEX Power Motion Servoamplifier

Input interface :


Input voltage	MIN.	MIN	TYPYCAL	MAX
level 0		-	0 V	1 V
level 1		3 V	5 V	5.5 V

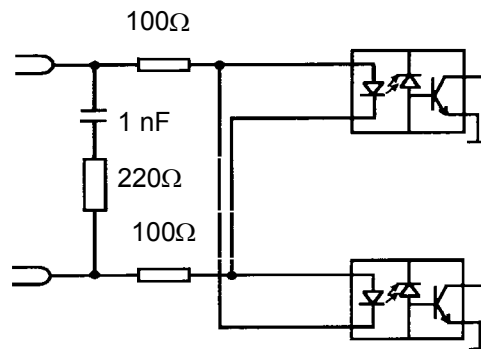

DIGIVEX Power Motion Servoamplifier

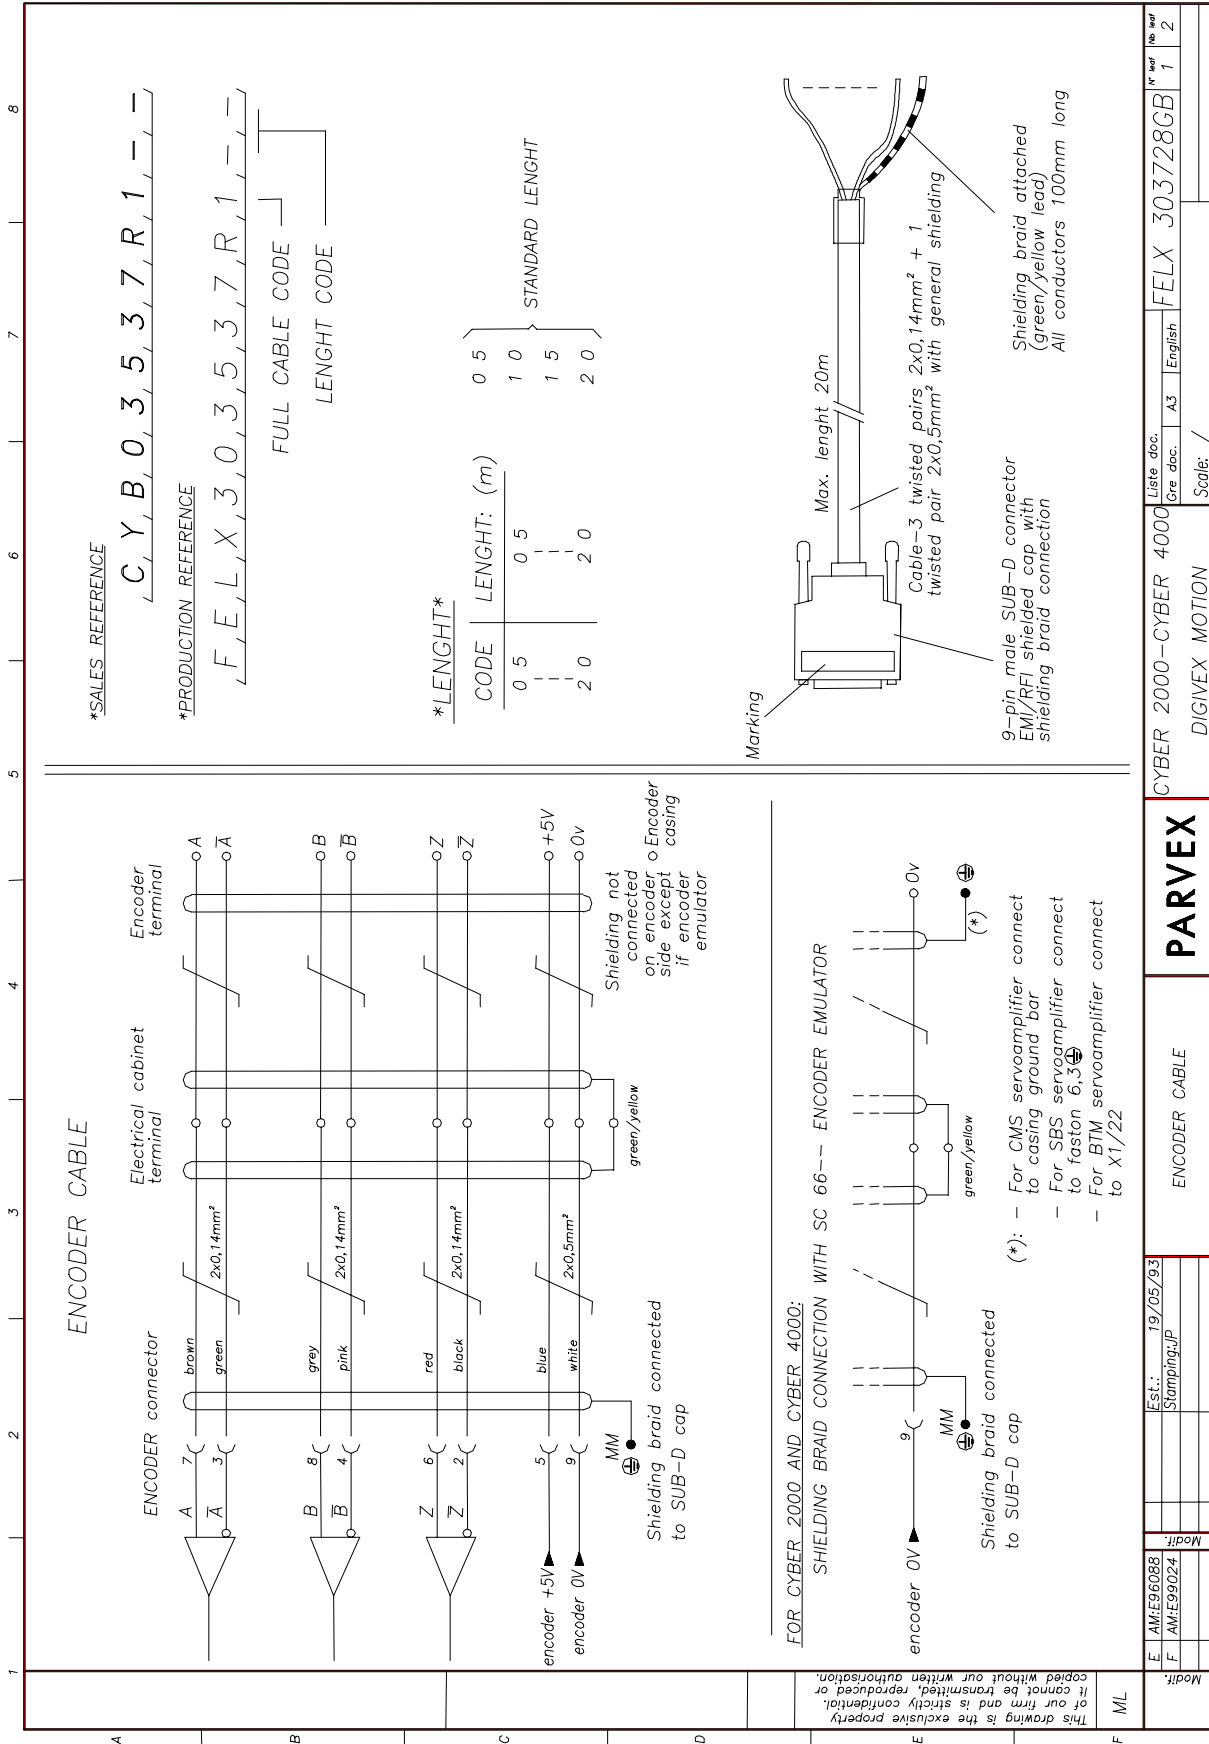

DIGIVEX Power Motion Servoamplifier

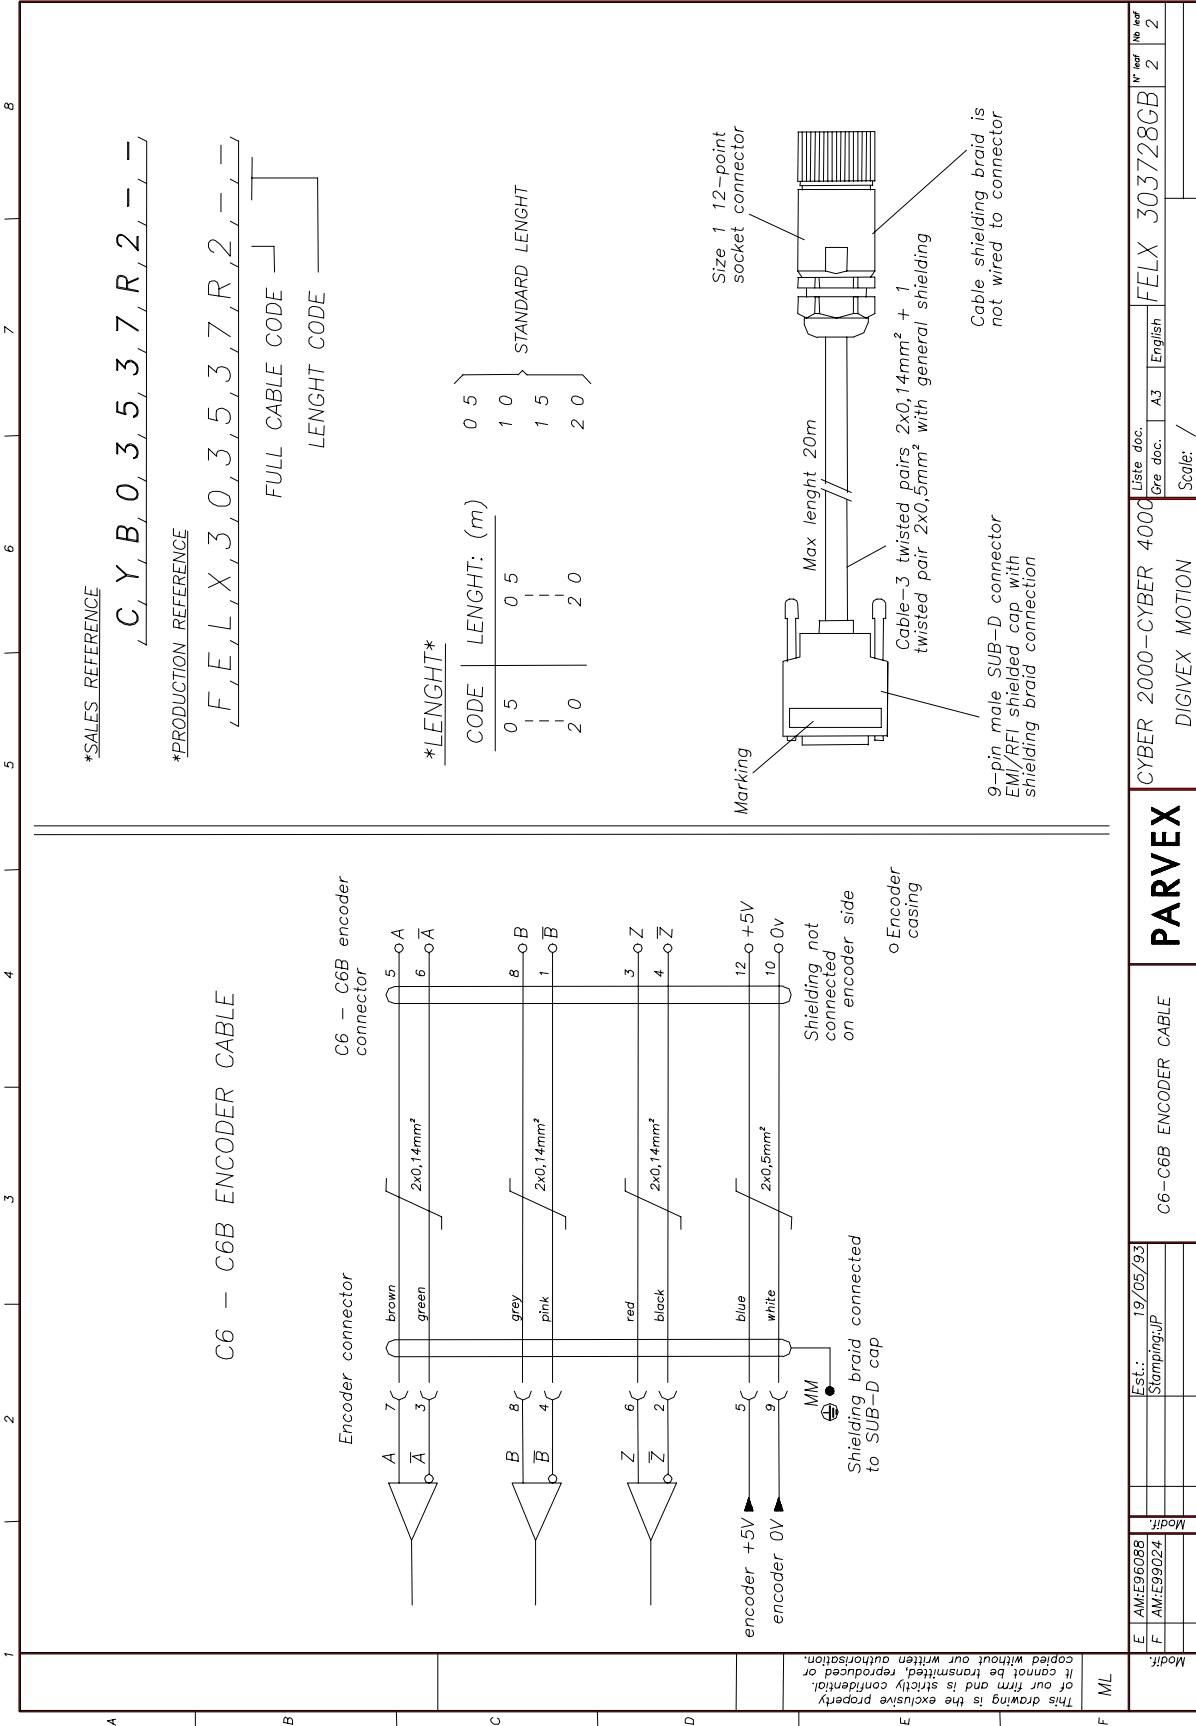

E	AM:E96088	Est.: 19/05/93	PARVEX	CYBER 2000-CYBER 4000	Liste doc.	FELX 303728GB	N° ref	2
F	AM:E99024	Stampings,JP	C6-C66B ENCODER CABLE	DIGIVEX MOTION	Gre doc.	A3	English	2
					Scale:	/		

5.16 Connecting the SinCos encoder input option (SC6645)

5.16.1 Description

This optional card, placed in the DPM, is used to connect a SinCos encoder which acts as an automatic motor and position measurement control unit for applications requiring both rotation speed and significant resolution.

Attention: in this case, the motor shaft must be mechanically free so that the motor can be polarized using a user program w as Motor_polarization.bdm which is to be found under C:\Program Files\Parvex\Pme4.xx\App_Parvex\Samples\Misc\.

The input (in7) and the output (out7) are assigned to this program:

- in7 = 1 authorizes the polarization phase to start.
- out7= 1 when the motor polarization phase is completed.

This program is only given as an example and can be modified according to the customer application.

In addition, a program available under PME (Parameter editor -> Motor/Resolver -> Setting SinCos encoder parameters) can be used to equalize any SINE and COSINE channel offsets as well as any differences in amplitude between the same channels.

The resolution obtained via the SinCos encoder is given by the formula:


RESOLUTION = NUMBER OF ENCODER PERIODS OF SINE X INTERPOLATION FACTOR
with the INTERPOLATION FACTOR being approx. equal to 512 points; the interpolation factor is the breakdown of a sinusoidal signal as a given number of points.

The position sensor should be a SinCos encoder with sinusoidal outputs:

- Tracks A, \bar{A} , B, \bar{B} , Top0, $\overline{\text{Top0}}$ (analog).
- 2 signals, A and B, in quadrature and their inverted signals \bar{A} \bar{B} , being short circuit resistant.
- Maximum number of authorized encoder periods of sine: 65536 periods/revolution.
- Level of differential peak to peak voltages A \bar{A} and B \bar{B} between 0.8 V (AC) and 1.1 V (AC).
- Power supply +5V.
- Maximum consumption 250 mA.
- Maximum frequency: 200 kHz for the A or B signals.
- An external 24V +/- 10% power supply must be provided to supply the SC6645 option card via the DSM SUB-D X2 (Contact 28: + 24V, Contact 10: 0V). An isolated DC-DC converter (24V /5V), on the option card is used to supply the encoder with 5V.
Attention: The external power supply needs to be 24V DC +/- 10%.

DIGIVEX Power Motion Servoamplifier

5.16.2 SUB-D X3 plug: Encoder input option.

CONTACT	TYPE	ROLE	Characteristics
5	Output	5V	Encoder power supply: maximum output 250 mA.  a +24V power supply for X2-28 / X2-10 plug is required for processing the encoder power supply
9	Output	0V	
7	Input	A	Encoder channel A SINE signal (differential inputs)
3	Input	\bar{A}	Encoder channel \bar{A}
8	Input	B	Encoder channel B COSINE signal (differential inputs)
4	Input	\bar{B}	Encoder channel \bar{B}
6	Input	Top 0	Encoder channel Top 0 (differential inputs)
2	Input	$\overline{\text{Top 0}}$	Encoder channel $\overline{\text{Top 0}}$

5.16.3 Cables


The DPM connection cable should be made up of 4 twisted pairs, shielded in pairs, with sections greater than or equal to 0.25 mm².

The maximum cable length is 40 m. Please consult us for information on longer cable lengths.

There is an approved PARVEX cable for controlling with SinCos encoder.

Input interface:

The input signals for the encoder input card should be sinusoidal and differential with peak to peak values between 0.8 V and 1.1 V.

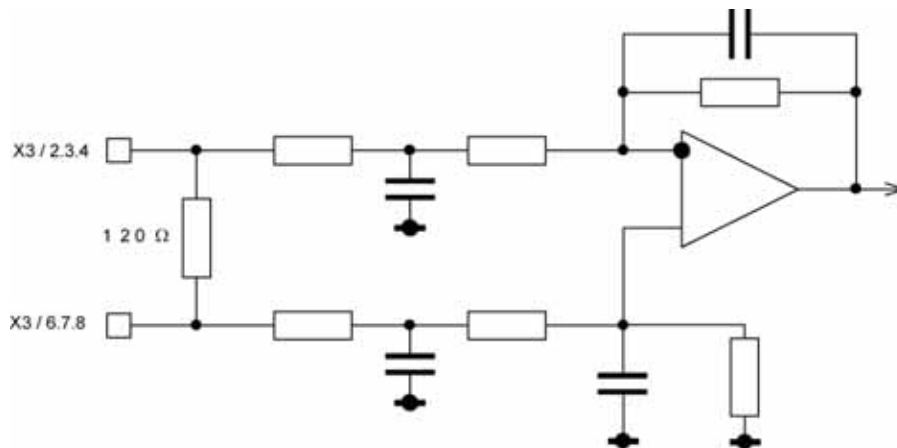

6. COMMISSIONING - DIAGNOSTICS

6.1 Start Up Sequence

6.1.1 Prior Checks

Wiring Check

- Power and auxiliary connections to DIGIVEX Power Motion.
- Wiring of Reset.
- External arrival of 24 V source for motor brake.
- Check resolver connections :
 - ◆ at motor end
 - ◆ at DIGIVEX Power Motion.
- Check the power, brake and thermal sensor connections :
 - ◆ at motor end
 - ◆ at DIGIVEX Power Motion.

Power Supply Type Check

- Power : 50/60 Hz, 400V +/- 10% or 480 + 10%.
- Auxiliaries : single-phase, 50/60 Hz, 400 V ± 10% or 480V + 10%.
- Brake supply : 24 V dc ± 10% (ripple included).

Warning: Before any work make sure that the power bus is at 0 V. Wait at least three minutes after the motors have come to a complete stop before carrying out any work. **Wait for all LEDs to go out.**


6.1.2 Commissioning with PME-DIGIVEX Motion

See the Manual PVD3516

DIGIVEX Power Motion Servoamplifier

6.2 Initialization Sequence

Description of initialization sequence times:

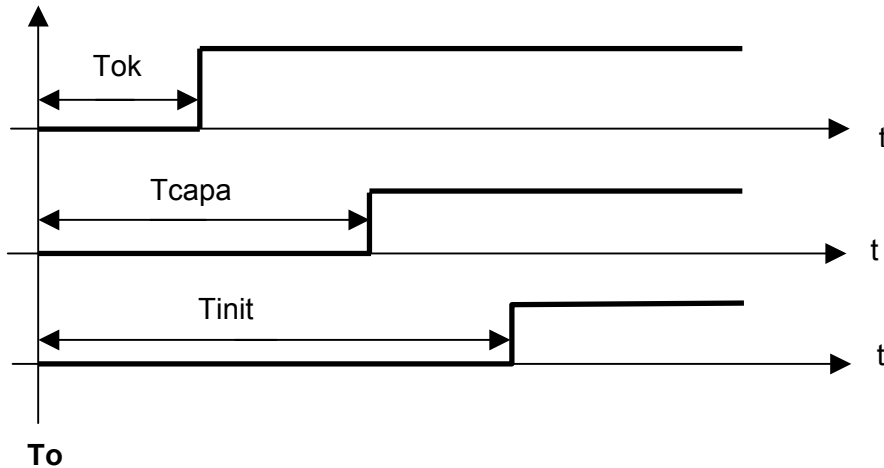

Upon energizing:

T_o	\leq Mains present
$T_o+30ms < T_{ok} < T_o+120ms$	\Rightarrow "OK" relay closed (terminal block B6)
$T_o+300ms < T_{capa} < T_o+700ms$	\Rightarrow capacitor preload internal contactor closed
$T_{init} > T_{capa}+60ms$	\Rightarrow INIT signal. (LED POWER ON lights up) The "drive OK" output on plug X2 is set to 24V


The INIT (initialization) signal enables the drive to work.

6.3 Stop Sequence

Attention: In the case of a motor with flux weakening (HV or HW spindle motor), the mains contactor should not be opened when the motor speed is greater than 50 rpm. Opening the contactor may cause overvoltages on the DC power bus and shorten the life of the drive. For emergency stops, we recommend that an electric braking be induced through an action on `move_en` or `emergency_cmd`. A waiting period corresponding to the maximum braking time of the motor should be observed before the contactor is opened.

DIGIVEX Power Motion Servoamplifier

6.3.1 Description of stop sequence times

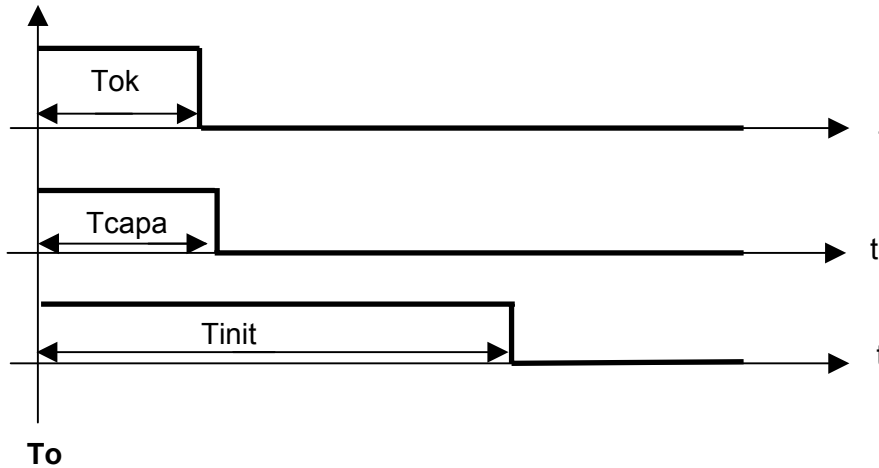

6.3.2 Stop due to removal of mains

T_o	\Leftarrow Removal of mains.
$T_o+3ms < T_{capa} < T_o+60ms$	\Rightarrow Power bridge is stopped and capacitor preload internal contactor is opened.
$T_o+25ms < T_{ok} < T_o+60ms$	\Rightarrow "OK" relay is opened on terminal block B6.
$T_o+T_d < T_{init}$	\Rightarrow After a time period T_d , approx. 2s, the status of the INIT signal changes. Furthermore, after this time, the "drive OK" output on plug X2 is set to 24V.

6.3.3 Stop following a fault on mains side

T_o	\Leftarrow Fault detected on mains side
$T_o+3ms < \text{Aff. Def.} < T_o+200ms$	\Rightarrow Stop of the power bridge and fault displayed on the power supply status LEDs.
$T_o+25ms < T_{ok} < T_o+200ms$	\Rightarrow The "OK" and "READY" contacts on terminal block B6 open, the power contactor must then open within 100 ms following the "OK" opening.

A restart is only possible after a RESET (on terminal block B7) or via the push button.

6.3.4 Stop following a fault on motor side

Axis motor:

T_o	\Leftarrow Fault detected on motor side.
$T_o+3ms:$	\Rightarrow The "drive OK" output on plug X2 changes to 0. The motor is no longer driven, the "FAULT" LED lights up.
$T_o < T_{ok} < T_o+20ms$	\Rightarrow The "OK" and "READY" contacts on terminal block B6 open, the power contactor must then open within 100 ms following the "OK" opening.

DIGIVEX Power Motion Servoamplifier

Spindle motor:

To

<= Fault detected on motor side.

To+3ms+Tf:

=> The fault is passed on to the power supply when the motor speed is less than 50 rpm after a time period Tf (Braking time), the "OK" and "ready" contacts then open.

A restart is only possible after a RESET (on terminal block B7) or via the push button. The RESET is not active until the cause of the fault has been removed.

6.4 Detecting Reasons for Stoppage

6.4.1 LED display - power supply function

LED	COLOR	FUNCTION
POWER ON	Green	Power on, with no fault in the supply or in the drive control.
POWER OFF	Red	Auxiliary supply on. No power supply (either because of a fault, or by switching off).
OVER CUR	Red	Internal excess current of supply, or current capacitors charging circuit damaged (current limiting resistor open or internal contactor damaged).
OVER VOLT	Red	Bus and mains overvoltage values are as follows:
PHASE	Red	No mains power phase.

Lit continuously: Mains overvoltage or Bus overvoltage

Bus overvoltage	Mains overvoltage
850V	550Vrms

In normal operation, the LED status is as follows :

- POWER ON Green
- POWER OFF Off
- OVER VOLT Off
- OVER CUR Off
- PHASE Off

Power supply current monitoring:

	DPM 50/80	DPM 100/120	DPM 150	DPM 200	DPM 300
Max bus operating current for 100 ms	50	100	150	200	300
Mains bridge blocking instantaneous current	90	150	210	300	450

DIGIVEX Power Motion Servoamplifier

6.4.2 Current Monitoring

Drive mean current

Each servoamplifier is characterized by two currents.

For example for a DIGIVEX Power Motion 50/80 :

- ◆ permissible permanent current 50A (sine wave peak value),
- ◆ maximum pulse current 80A, permissible for a limited time (0.3 - 1 s).

To prevent excessive overheating of the drive the mean current [$I = f(t)$] is compared after about two seconds filtering with the permanent permissible current (rating).

There is then a choice between two strategies :

- ◆ Strategy 1: Fault with opening of the power supply OK relay and the main contactor
- ◆ Strategy 2: Reduction of the permanent drive current of 90% of the permanent permissible current. A default 7 display flashes.

Motor rms current

To prevent the motor from being tripped by the thermal sensor, the drive monitors the rms current [$I^2 = f(t)$].

The rms current is compared with the permanent permissible current under slow rotation by the motor \hat{I}_0 (after first order filtering). This data is characteristic of the motor and is known to the drive when the motor-drive selection is made.

As before, there is a choice of two strategies :

- ◆ Strategy 1: fault
- ◆ Strategy 2: reduction of drive pulse current to $0.9 \hat{I}_0$ motor. A default 7 display flashes.

Drive output current

Two features are monitored :

- ◆ Protection against short circuits: Current derivative monitoring.
- ◆ Excessive output current (max. I): checks whether the measured current exceeds the drive pulse current by 30%.

In both cases the fault is tripped.

DIGIVEX Power Motion Servoamplifier

6.4.3 Temperature Monitoring

DIGIVEX Power Motion dissipator temperature

- ◆ If the dissipator temperature is less than 70°C nothing happens.
- ◆ From 70° to 94°C the pulse current that the drive can deliver is reduced. A default 3 display flashes.
- ◆ At 95°C fault tripped.

Servomotor winding temperature

Each motor has a thermal sensor. This sensor may or may not be taken into consideration when customizing the drive. If taken into consideration (usual case), excessive motor temperature causes a fault.

Ambient temperature

Operation is stopped if the ambient temperature measured between the electronic cards exceeds 70°C.

DIGIVEX Power Motion Servoamplifier

6.4.4 7-segment display status

Function: To provide information on the DIGIVEX status distinguishing between faults.

Description :

Description	Display	status _ number	Status
<i>Stand by without power with execution of application program</i>	0	36	Information
<i>Stand by without power without execution of application program</i>	blinking 0	1	Information
<i>Power present with execution of application program</i>	1	21	Information
<i>Power present without execution of application program</i>	blinking 1	2	Information
<i>Resolver failure</i>	2	3	Major Fault
<i>Encoder fault</i>	blinking 2	37	Major Fault
<i>Excessive ambient temperature</i>	3	4	Major Fault
<i>Excessive heatsink temperature</i>	3	5	Major Fault
<i>High heatsink temperature with reduced current</i>	blinking 3	6	Information
<i>Excessive motor speed (in rpm)</i>	4	7	Major Fault
<i>Excessive application speed (in Units/s)</i>	4	35	Major Fault
<i>Excessive supply current</i>	5	8	Major Fault
<i>Excessive variable speed drive current</i>	6	9	Major Fault
<i>Excessive dl/dt</i>	6	10	Major Fault
<i>Excessive average current</i>	7	11	Major Fault
<i>Excessive RMS current</i>	7	13	Major Fault
<i>Excessive average current with reduced current</i>	blinking 7	12	Information
<i>Excessive RMS current with reduced current</i>	blinking 7	14	Information
<i>Bus overvoltage</i>	8	15	Major Fault
<i>Excessive motor temperature</i>	9	16	Major Fault
<i>Option card fault</i>	11	29	Major Fault
<i>Incompatible Axis/Spindle definition</i>	A	17	Major Fault
<i>CAN link fault</i>	b	18	Major Fault
<i>Motor not connected</i>	C	19	Major Fault
<i>User program memory fault</i>	d	20	Major Fault
<i>Emergency stop</i>	E	38	Major Fault
<i>Personalization board missing</i>	F	22	Major Fault
<i>Axis / personalization board incompatible</i>	F	23	Major Fault
<i>Internal parameter calculation fault</i>	F	24	Major Fault
<i>+ Electrical limit reached</i>	H	25	Minor Fault
<i>- Electrical limit reached</i>	H	26	Minor Fault
<i>+ Software limit reached</i>	L	33	Minor Fault
<i>- Software limit reached</i>	L	34	Minor Fault
<i>Program execution fault</i>	P	27	Minor Fault
<i>Tracking error fault</i>	U	28	Major Fault
<i>C167 CPU Fault</i>	.	31	Major Fault
<i>DSP CPU Fault</i>	. blinking	32	Major Fault
<i>Synchronization message timeout</i>	blinking b	41	Minor Fault
<i>Licence missing</i>	blinking F	42	Minor Fault

Major faults cause the OK relay to open.

Minor faults cause an operating error to be displayed.


DIGIVEX Power Motion Servoamplifier

7. UL CERTIFICATE

Certificate of Compliance

Certificate Number 120104 - E214717
Report Reference E214717, October 23rd, 2003
Issue Date 2004 January 12

Page 1 of 2

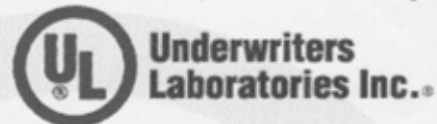

Issued to: **PARVEX S A**
8 AVE DU LAC
21000 DIJON FRANCE


This is to certify that representative samples of **Power Conversion Equipment**
Three Phase Input Model DPD, DPM

Have been investigated by Underwriters Laboratories Inc.® in accordance with the Standard(s) indicated on this Certificate.

Standard(s) for Safety: **UL 508C - Power Conversion Equipment**
CSA C22.2 No. 14-95 - Industrial Control Equipment

Additional Information: **See Addendum for Electrical Ratings**

Only those products bearing the UL Listing Mark for the US and Canada should be considered as being covered by UL's Listing and Follow-Up Service meeting the appropriate requirements for US and Canada.

The UL Listing Mark for the US and Canada generally includes: the UL in a circle symbol with "C" and "US" identifiers;  the word "LISTED"; a control number (may be alphanumeric) assigned by UL; and the product category name (product identifier) as indicated in the appropriate UL Directory.

Look for the UL Listing Mark on the product

Issued by: *P. Pham/BX*
P. PHAM - Project Engineer

Reviewed by: *D. Roux/BX*
D. ROUL - Project Engineer

UL International France SA

UL International France SA


Pursuant to the Corporate Services Agreement between UL International France SA and Underwriters Laboratories Inc. ("UL"), UL hereby accepts and issues this Certificate of Compliance. For questions in France, you may call 33 0 1 60 19 88 00.

DIGIVEX Power Motion Servoamplifier

Certificate of Compliance

Certificate Number **120104 - E214717**
 Report Reference **E214717, October 23rd, 2003**
 Issue Date **2004 January 12**

Page 2 of 2

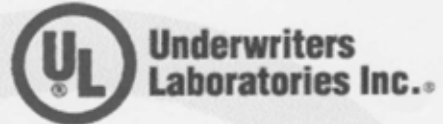

This is to verify that representative samples of the product as specified on this certificate were tested according to the current UL and UL requirements.

Electrical Ratings:

The output current ratings below are steady state, 100% values.
 Then a linear reduction of the currents based on the temperatures of the heatsink (via NTC) is applied: from 70°C (160%) to 95°C (100%). The drive shuts down when the temperatures of the heatsink (via NTC) reaches 95°C.

Model	Main Input Vac Phase Freq.	Main Input I (A rms)	Output Voltage Vac Phase Freq. range	Output I (A) rms	Short Circuit Rating (A)	Required Branch Circuit Protection Ferraz Class J Time Delay fuse (JDDZ)	Auxiliary input fuse (JDDZ)	Aux. Input Vac Phase	Aux. Input I (A rms)	Automatic control supply (Relay input)
PDP or DPM series	400Vac 3 phases 47-63 Hz	32 A #	0-400 Vac 3 phase 0-1.5 kHz	31 A	5,000	AJT40 (40A)	ATDR2 (2A)	400Vac 1 phase 47-63 Hz	0.2 A max	250Vac Max

Output max. power: 16kW

Thermal Protection Connection for Motor (Connection B4: TH+ and TH-). TH- is referenced to 0 V, 15 V from TH+ to TH-.

Issued by: *P. Pham/PE*
P. PHAM - Project Engineer

Reviewed by: *D. Roux/PE*
D. ROUX - Project Engineer

UL International France SA
 Pursuant to the Corporate Services Agreement between UL International France SA and Underwriters Laboratories Inc. ("UL"), UL hereby accepts and issues this Certificate of Compliance.